

Port Mirroring Configuration Commands

Table of Contents

Chapter 1 Configuring Port Mirroring Commands	1
1.1 Port Mirroring Configuration Commands	1
1.1.1 mirror	1
1.1.2 show mirror.....	1

Chapter 1 Configuring Port Mirroring Commands

1.1 Port Mirroring Configuration Commands

The following are port mirroring configuration commands:

- mirror
- show mirror

1.1.1 mirror

Description

```
[no] mirror session session_number {destination {interface interface-id} | source {interface interface-id [, | -] [both | rx | tx]}}
```

It is used to configure the command.

Parameters

Parameter	Description
<i>session_number</i>	Number of port mirroring, whose value is 1
<i>destination</i>	Information about the destination port mirroring
<i>source</i>	Information about the mirrored port
<i>both rx tx</i>	Data flow that will be mirrored <i>rx</i> means that the input data is mirrored. <i>tx</i> means that the output data is mirrored. both means that input and output data are mirrored.

Instruction

The command is configured in global configuration mode.

Example

Port g0/2 functions as the output mirror of port g0/1.

```
Switch(config)# mirror session 1 destination interface g0/2
```

```
Switch(config)# mirror session 1 source interface g0/1 tx
```

1.1.2 show mirror

Description

```
show mirror [session session_number]
```

It is used to display the port mirroring information.

Parameter

Parameter	Description
session_number	Number of port mirroring, whose value is 1

Default

None

Instruction

It is used to display the port mirroring information.

Example

All port mirroring information is displayed.

```
Switch# show
mirror Session 1
-----
Source Ports:
RX Only: g0/3
TX Only: None
Both: None
Source VLANs:
RX Only: None
TX Only: None
Both: None
```