



IP-PBR CONFIGURATION COMMANDS

## IP-PBR Configuration Commands

## Table of contents

|   |   |
|---|---|
| CHAPTER 1 IP-PBR CONFIGURATION COMMANDS | 3 |
| 1.1.1. ip pbr                           | 3 |
| 1.1.2. show ip pbr                      | 3 |
| 1.1.3. show ip pbr policy               | 4 |
| 1.1.4. show ip pbr exf                  | 4 |
| 1.1.5. debug ip pbr                     | 5 |

# CHAPTER 1 IP-PBR CONFIGURATION COMMANDS

IP-PBR configuration commands include:

- ip pbr
- show ip pbr
- show ip pbr policy
- show ip pbr exf
- debug ip pbr

## 1.1.1. ip pbr

### Description

**ip pbr**  
**no ip pbr**

### Parameter

None

### Default value

The IP-PBR function is disabled by default.

### Description

It is used to enable or disable the IP-PBR function. The **no ip pbr** command is used to resume the default value.

### Example

```
switch(config)# ip pbr
switch(config)#

```

## 1.1.2. show ip pbr

### Description

**show ip pbr**

### Parameter

None

### Default value

None

### Description

It is used to display the information about RIP configuration.

### Example

The following example shows how to display the information about IP-PBR running.  
switch(config)# show ip pbr

IP policy based route state: enabled  
No equiv exf apply item  
VLAN3 use route-map ddd, and has 1 entry active.

-----

Entry sequence 10, permit  
Match ip access-list:  
ac1  
Set Outgoing nexthop  
90.0.0.3  
switch(config)#

### 1.1.3. show ip pbr policy

#### Description

**show ip pbr policy**

#### Parameter

None

#### Default value

None

#### Description

It is used to display the information about RIP configuration.

#### Example

The following example shows how to display the information about IP-PBR policy routing configuration.

IP policy based route state: enabled  
VLAN3 use route-map ddd, and has 1 entry active.

-----

Entry sequence 10, permit  
Match ip access-list:  
ac1  
Set Outgoing nexthop  
90.0.0.3  
switch(config)#

### 1.1.4. show ip pbr exf

#### Description

**show ip pbr exf**

### Parameter

None

### Default value

None

### Description

It is used to display the information about IP-PBR equivalent routing.

### Example

The following example shows how to display the information about IP-PBR equivalent routing.

```
switch(config)# show ip pbr exf
IP policy based route state: enabled
Equiv EXF has 1 entry active.
```

```
-----
Entry sequence 1, handle c1f95b0
Dest ip: 1.1.0.0/16
90.0.0.3
192.168.213.161
switch(config)#

```

### 1.1.5. debug ip pbr

### Description

```
debug ip pbr
no debug ip pbr
```

### Parameter

None

### Default value

None

### Description

It is used to enable or disable the debugging switch of IP-PBR.

### Example

The following example shows how to enable the debugging switch of IP-PBR.

```
switch(config)# debug ip pbr
switch(config)#

```