



URPF CONFIGURATION COMMANDS

## uRPF Configuration Commands

## Table of contents

CHAPTER 1 URPF CONFIGURATION COMMANDS	3
1.1. uRPF Configuration Commands	3
1.1.1. urpf check(Global)	3
1.1.2. urpf check(VLAN interface)	3

# CHAPTER 1 uRPF CONFIGURATION COMMANDS

## 1.1. uRPF Configuration Commands

uRPF configuration commands includes:

- urpf check (Global)
- urpf check(VLAN port)

### 1.1.1. urpf check(Global)

#### Syntax

Enable/disable uRPF check in the global mode, run the following command.

**[no] urpf check**

#### Parameter

None

#### Default value

Disabled

#### Command mode

Global configuration mode

#### Usage guidelines

The command can be effective only uRPF mode is enabled under the port of Urpf in the global mode.

#### Example

None

#### Related command

None

### 1.1.2. urpf check(VLAN interface)

#### Syntax

Set uPRF check mode under the mode of VLAN, run the following command.

**urpf check mode [uncheck\_default\_route]**

**no urpf check**

#### Parameter

Parameter	Description
<i>mode</i>	Configures uRPF check mode, strict or loose.

<code>uncheck_default_route</code>	After check uPRF, FIB entries will not be checked if they are default route.
------------------------------------	--

### Default value

Disabled under the port of VLAN

### Command mode

Interface configuration mode

### Usage guidelines

Configuring uRPF check mode under the port of VLAN can be effective only when uRPF check is enabled in the global mode.

### Example

The following example shows how to configure uRPF strict check mode and enable the fitted FIB entries as the default route.

```
urpf check strict uncheck_default_route
```

### Related command

show interface

Show uRPF check statistics