



РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

Оглавление

1. HTTP SWITCH CONFIGURATION	6
1.1. HTTP Configuration	6
1.1.1 Choosing the Prompt Language	6
1.1.2 Setting the HTTP Port	6
1.1.3 Enabling the HTTP Service	6
1.1.4 Setting the HTTP Access Mode	7
1.1.5 Setting the Maximum Number of VLAN Entries on Web Page	7
1.1.6 Setting the Maximum Number of Multicast Entries Displayed on a Web Page	7
1.2. HTTPS Configuration	8
1.1.7 Setting the HTTP Access Mode	8
1.1.8 It is used to set the HTTPS port.	8
2. CONFIGURATION PREPARATION	8
2.1. Accessing the Switch Through HTTP	8
2.1.1. Initially Accessing the Switch	9
2.1.2. Upgrading to the Web-Supported Version	9
2.2. Accessing a Switch Through Secure Links	10
2.3. Introduction of Web Interface	11
2.3.1. Top Control Bar	11
2.3.2. Navigation Bar	12
2.3.3. Configuration Area	13
2.3.4. Bottom Control Bar	13
2.3.5. Configuration Area	14
3. BASIC CONFIGURATION	15
3.1. Hostname Configuration	15
3.2. Time Management	15
4. CONFIGURATION OF THE PHYSICAL INTERFACE	17
4.1. Configuring Port Description	17
4.2. Configuring the Attributes of the Port	18
4.3. Rate control	18
4.4. Port mirroring	19
4.5. Loopback Detection	19
4.6. Port security	19
4.6.1. IP Binding Configuration	19
4.6.2. MAC Binding Configuration	20

4.6.3. Setting the Static MAC Filtration Mode	20
4.6.4. Static MAC Filtration Entries	20
4.6.5. Setting the Dynamic MAC Filtration Mode	21
4.7. Storm control	21
4.7.1. Broadcast Storm Control	21
4.7.2. Multicast Storm Control	22
4.7.3. Unknown Unicast Storm Control	23
4.8. Port Protect Group Configuration	23
4.8.1. Port Protect Group List	23
4.8.2. Port Protect Group Interface Configuration	24
5. LAYER-2 CONFIGURATION	25
5.6. VLAN Settings	25
5.1.1. VLAN List	25
5.1.2. VLAN Settings	26
5.2. GVRP Configuration	27
5.2.1. GVRP Global Attribute Configuration	27
5.2.2. Global Interface Attribute Configuration	27
5.3. STP Configuration	28
5.3.1. STP Status Information	28
5.3.2. Configuring the Attributes of the STP Port	28
5.4. IGMP-Snooping Configuration	29
5.4.1. IGMP-Snooping Configuration	29
5.4.2. IGMP-Snooping VLAN List	29
5.4.3. Static Multicast Address	30
5.4.4. Multicast List	31
5.5. Setting Static ARP	31
5.6. Static MAC Address Configuration	32
5.7. LLDP Configuration	33
5.7.1. Configuring the Global Attributes of LLDP	33
5.7.2. LLDP Port Attribute Configuration	34
5.8. DDM Configuration	34
5.9. Link Aggregation Configuration	34
5.9.1. Port Aggregation Configuration	34
5.9.2. Configuring Load Balance of Port Aggregation Group	35
5.10. EAPS Ring Protection Configuration	36
5.10.1. EAPS Ring List	36
5.10.2. EAPS Ring Configuration	36

5.11. MEAPS Configuration	37
5.11.1. MEAPS Ring Configuration	37
5.11.2. MEAPS Ring Configuration	38
5.12. Backup Link Protocol Configuration	38
5.12.1. Backup Link Protocol Global Configuration	38
5.12.2. Backup Link Protocol Interface Configuration	39
5.13. DHCP Snooping Configuration	40
5.13.1. DHCP Snooping Global Attribute Configuration	40
5.13.2. DHCP Snooping VLAN Attribute Configuration	40
5.13.3. DHCP Snooping Interface Attribute Configuration	41
5.13.4. DHCP Snooping Manual Binding Configuration	42
5.14. MTU Configuration	42
5.15. PDP Configuration	43
5.15.1. Configuring the Global Attributes of PDP	43
5.15.2. Configuring the Attributes of the PDP Port	43
5.16. STP Configuration	44
5.16.1. STP Status Information	44
5.16.2. Configuring the Attributes of the STP Port	44
5.17. IGMP-Snooping Configuration	45
5.17.1. IGMP-Snooping Configuration	45
5.17.2. IGMP-Snooping VLAN List	45
5.17.3. Static Multicast Address	46
5.17.4. Multicast List	47
5.18. Setting Static ARP	47
5.19. Ring Protection Configuration	48
5.19.1. EAPS Ring List	48
5.19.2. EAPS Ring Configuration	49
5.20. DDM Configuration	50
6. LAYER-3 CONFIGURATION	51
6.6. Configuring the VLAN Interface	51
6.7. Setting the Static Route	52
6.8. IGMP Agent	53
6.3.1. Enabling the IGMP Agent	53
6.3.2. Setting the IGMP Agent	53
7. ADVANCED CONFIGURATION	55
7.6. QoS Configuration	55
7.1.1. Configuring QoS Port	55

7.1.2. Global QoS Configuration	56
7.2. MAC Access Control List	56
7.2.1. Setting the Name of the MAC Access Control List	56
7.2.2. Setting the Rules of the MAC Access Control List	57
7.2.3. Applying the MAC Access Control List	58
7.3. IP Access Control List	58
7.3.1. Setting the Name of the IP Access Control List	58
7.3.2. Setting the Rules of the IP Access Control List	59
7.3.3. Applying the IP Access Control List	60
8. NETWORK MANAGEMENT CONFIGURATION	61
8.6. SNMP Configuration	61
8.1.1. SNMP Community Management	61
8.1.2. SNMP Host Management	62
8.2. RMON	62
8.2.1. RMON Statistic Information Configuration	62
8.2.2. RMON History Information Configuration	63
8.2.3. RMON Alarm Information Configuration	64
8.2.4. RMON Event Configuration	64
9. DIAGNOSIS TOOLS	66
9.6. Ping	66
8.2.5. Ping	66
10. SYSTEM MANAGEMENT	68
10.6. User Management	68
10.1.1. User List	68
10.1.2. Establishing a New User	69
10.2. Log Management	69
10.3. Managing the Configuration Files	70
10.3.1. Exporting the Configuration Information	70
10.3.2. Importing the Configuration Information	71
10.4. Software Management	71
10.4.1. Backing up the IOS Software	71
10.4.2. Upgrading the IOS Software	72
10.5. Resuming Initial Configuration	72
10.6. Rebooting the Device	73

1. HTTP SWITCH CONFIGURATION

1.1. HTTP Configuration

Switch configuration can be conducted not only through command lines and SNMP but also through Web browser. The switches support the HTTP configuration, the abnormal packet timeout configuration, and so on.

1.1.1 Choosing the Prompt Language

Up to now, switches support two languages, that is, English and Chinese, and the two languages can be switched over through the following command.

Command	Purpose
<code>ip http language {chinese english}</code>	Sets the prompt language of Web configuration to Chinese or English .

1.1.2 Setting the HTTP Port

Generally, the HTTP port is port 80 by default, and users can access a switch by entering the IP address directly; however, switches also support users to change the service port and after the service port is changed you have to use the IP address and the changed port to access switches. For example, if you set the IP address and the service port to **192.168.1.3** and **1234** respectively, the HTTP access address should be changed to **http:// 192.168.1.3:1234**. You'd better not use other common protocols' ports so that access collision should not happen. Because the ports used by a lot of protocols are hard to remember, you'd better use port IDs following port 1024.

Command	Purpose
<code>ip http port { <i>portNumber</i> }</code>	Sets the HTTP port.

1.1.3 Enabling the HTTP Service

Switches support to control the HTTP access. Only when the HTTP service is enabled can HTTP exchange happen between switch and PC and, when the HTTP service is closed, HTTP exchange stops.

Command	Purpose
ip http server	Enables the HTTP service.
ip http { <i>timeout</i> }	Configures the timeout time of HTTP abnormal packets.

1.1.4 Setting the HTTP Access Mode

You can access a switch through two access modes: HTTP access and HTTPS access, and you can use the following command to set the access mode to **HTTP**.

Command	Purpose
ip http http-access enable	Sets the HTTP access mode.

1.1.5 Setting the Maximum Number of VLAN Entries on Web Page

A switch supports at most 4094 VLANs and in most cases Web only displays parts of VLANs, that is, those VLANs users want to see. You can use the following command to set the maximum number of VLANs. The default maximum number of VLANs is 100.

Command	Purpose
ip http web max-vlan { <i>max-vlan</i> }	Sets the maximum number of VLAN entries displayed in a web page.

1.1.6 Setting the Maximum Number of Multicast Entries Displayed on a Web Page

A switch supports at most 100 multicast entries. You can run the following command to set the maximum number of multicast entries and Web then shows these multicast entries. The default maximum number of multicast entries is 15.

Command	Purpose
---------	---------

<code>ip http web igmp-groups { <i>igmp-groups</i> }</code>	Sets the maximum number of multicast entries displayed in a web page.
---	---

1.2. HTTPS Configuration

In order to improve the security of communications, switches support not only the HTTP protocol but also the HTTPS protocol. HTTPS is a security-purposed HTTP channel and it is added to the SSL layer under HTTP.

1.1.7 Setting the HTTP Access Mode

You can run the following command to set the access mode to **HTTPS**.

Command	Purpose
<code>ip http ssl-access enable</code>	Sets the HTTPS access mode.

1.1.8 It is used to set the HTTPS port.

As the HTTP port, HTTPS has its default service port, port 443, and you also can run the following command to change its service port. It is recommended to use those ports following port 1024 so as to avoid collision with other protocols' ports.

Parameter	Remarks
<code>ip http secure-port {<i>portNumber</i>}</code>	Sets the HTTPS port.

2. CONFIGURATION PREPARATION

2.1. Accessing the Switch Through HTTP

When accessing the switch through Web, please make sure that the applied browser complies with the following requirements:

- HTML of version 4.0
- HTTP of version 1.1
- JavaScript™ of version 1.5

What's more, please ensure that the main program file, running on a switch, supports Web access and your computer has already connected the network in which the switch is located.

2.1.1. Initially Accessing the Switch

When the switch is initially used, you can use the Web access without any extra settings:

1. Modify the IP address of the network adapter and subnet mask of your computer to **192.168.0.1** and **255.255.255.0** respectively.
2. Open the Web browser and enter **192.168.0.1** in the address bar. It is noted that **192.168.0.1** is the default management address of the switch.
3. If the Internet Explorer browser is used, you can see the dialog box in figure 1. Both the original username and the password are "admin", which is capital sensitive.

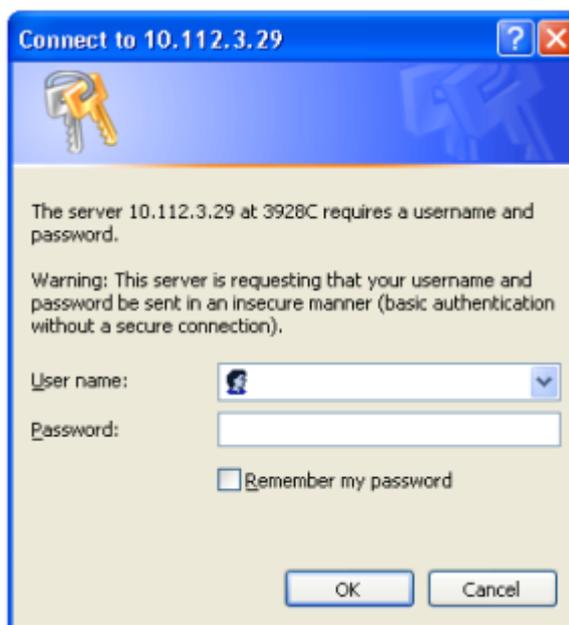


Figure 1: ID checkup of WEB login

4. After successful authentication, the systematic information about the switch will appear on the IE browser.

2.1.2. Upgrading to the Web-Supported Version

If your switch is upgraded to the Web-supported version during its operation and the switch has already stored its configuration files, the Web visit cannot be directly

applied on the switch. Perform the following steps one by one to enable the Web visit on the switch:

1. Connect the console port of the switch with the accessory cable, or telnet to the management address of the switch through the computer.
2. Enter the global configuration mode of the switch through the command line, the DOS prompt of which is similar to “Switch_config#”.
3. If the management address of the switch is not configured, please create the VLAN interface and configure the IP address.
4. Enter the **ip http server** command in global configuration mode and start the Web service.
5. Run **username** to set the username and password of the switch. For how to use this command, refer to the “Security Configuration” section in the user manual.

After the above-mentioned steps are performed, you can enter the address of the switch in the Web browser to access the switch.

6. Enter **write** to store the current configuration to the configuration file.

2.2. Accessing a Switch Through Secure Links

The data between the WEB browser and the switch will not be encrypted if you access a switch through common HTTP. To encrypt these data, you can use the secure links, which are based on the secure sockets layer, to access the switch.

To do this, you should follow the following steps:

1. Connect the console port of the switch with the accessory cable, or telnet to the management address of the switch through the computer.
2. Enter the global configuration mode of the switch through the command line, the DOS prompt of which is similar to “Switch_config#”.
3. If the management address of the switch is not configured, please create the VLAN interface and configure the IP address.
4. Enter the **ip http server** command in global configuration mode and start the Web service.
5. Run **username** to set the username and password of the switch. For how to use this command, refer to the “Security Configuration” section in the user manual.
6. Run **ip http ssl-access enable** to enable the secure link access of the switch.

7. Run **no ip http http-access enable** to forbid to access the switch through insecure links.
8. Enter **write** to store the current configuration to the configuration file.
9. Open the WEB browser on the PC that the switch connects, enter **https://192.168.0.1** on the address bar (**192.168.0.1** stands for the management IP address of the switch) and then press the **Enter** key. Then the switch can be accessed through the secure links.

2.3. Introduction of Web Interface

The Web homepage appears after login, as shown in figure 2:



Figure 2: Web homepage

The whole homepage consists of the top control bar, the navigation bar, the configuration area and the bottom control bar.

2.3.1. Top Control Bar



Figure 3: Top control bar

Save All	Write the current settings to the configuration file of the device. It is equivalent to the execution of the write command. The configuration that is made through Web will not be promptly written to the configuration file after validation. If you click “Save All”, the unsaved configuration will be lost after rebooting.
-----------------	---

English	The interface will turn into the English version.
Chinese	The interface will turn into the Chinese version.
Logout	Exit from the current login state. After you click "logout", you have to enter the username and the password again if you want to continue the Web function.

After you configure the device, the result of the previous step will appear on the left side of the top control bar. If error occurs, please check your configuration and retry it later.

2.3.2. Navigation Bar




Figure 4 Navigation bar

The contents in the navigation bar are shown in a form of list and are classified according to types. By default, the list is located at "Runtime Info". If a certain item need be configured, please click the group name and then the sub-item. For example, to browse the flux of the current port, you have to click "Interface State" and then "Interface Flow".

Note:

The limited user can only browse the state of the device and cannot modify the configuration of the device. If you log on to the Web with limited user's permissions, only "Interface State" will appear.

2.3.3. Configuration Area

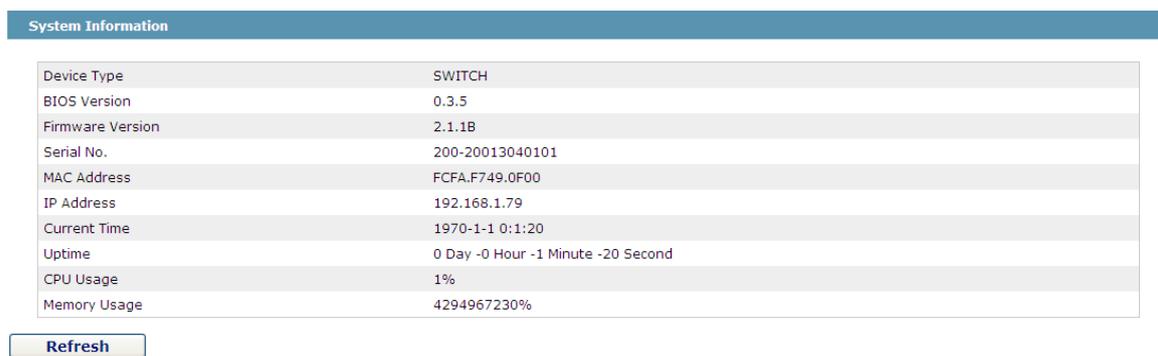

System Information	
Device Type	SWITCH
BIOS Version	0.3.5
Firmware Version	2.1.1B
Serial No.	200-20013040101
MAC Address	FCFA.F749.0F00
IP Address	192.168.1.79
Current Time	1970-1-1 0:1:20
Uptime	0 Day -0 Hour -1 Minute -20 Second
CPU Usage	1%
Memory Usage	4294967230%

Figure 5 Configuration Area

The configuration display area shows the state and configuration of the device. The contents of this area can be modified by the clicking of the items in the navigation bar.

2.3.4. Bottom Control Bar



Figure 6: Bottom control bar

If you click the **About** button on the top control bar, the bottom control bar appears. The main function of the bottom control bar is to realize the automatic refreshing of the configuration display area. For example, if you click "Interface Flow" in the navigation bar and then click "Refresh", the flow of the interface can be continuously monitored.

After you click "Refresh", the countdown of the next-time refresh will appear on the left side. You can modify the countdown settings by clicking the dropdown list.

Note:

The smaller the countdown value is set, that is, the higher the frequency is, the higher the CPU usage is.

2.3.5. Configuration Area

The configuration area is to show the content that is selected in the navigation area. The configuration area always contains one or more buttons, and their functions are listed in the following table:

Refresh	Refresh the content shown in the current configuration area.
Apply	Apply the modified configuration to the device. The application of the configuration does not mean that the configuration is saved in the configuration file. To save the configuration, you have to click “Save All” on the top control bar.
Reset	Means discarding the modification of the sheet. The content of the sheet will be reset.
New	Creates a list item. For example, you can create a VLAN item or a new user.
Delete	Deletes an item in the list.
Back	Go back to the previous-level configuration page.

3. BASIC CONFIGURATION



Figure 1 A list of basic configuration

3.1. Hostname Configuration

If you click **Basic Config -> Hostname Config** in the navigation bar, the **Hostname Configuration** page appears, as shown in figure 3.

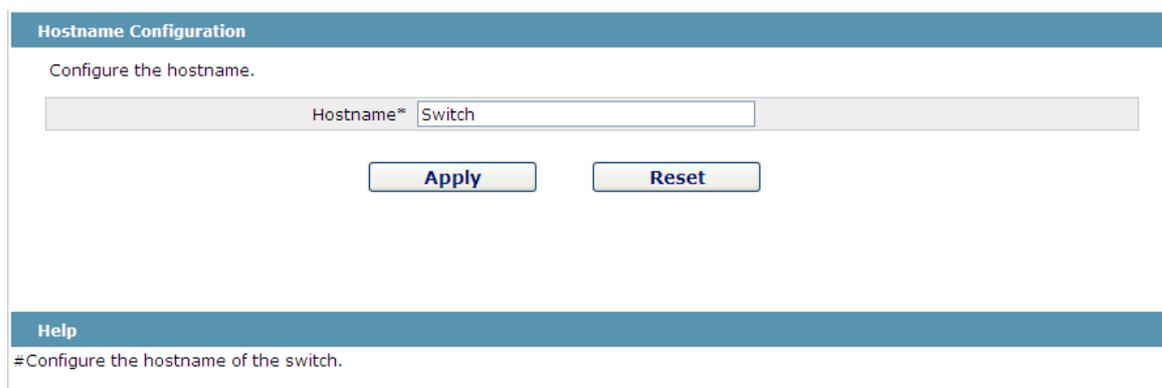


Figure 3 Hostname configuration

The hostname will be displayed in the login dialog box.

The default name of the device is "Switch". You can enter the new hostname in the text box shown in figure 3 and then click "Apply".

3.2. Time Management

If you click **System Manage -> Time Manage**, the **Time Setting** page appears.

Time Setting

System Time:

Select Time-Zone	<input type="text" value="(GMT)Greenwich Mean Time,Dublin,London,Lisbon"/>						
<input checked="" type="radio"/> Set Time Manually							
	Set Time	<input type="text" value="1970"/> Year	<input type="text" value="01"/> Month	<input type="text" value="01"/> Day	<input type="text" value="00"/> Hour	<input type="text" value="10"/> Minute(s)	<input type="text" value="10"/> Second
<input type="radio"/> Network Time Synchronization							
SNTP Server One	<input type="text"/>						
SNTP Server Two	<input type="text"/>						
SNTP Server Three	<input type="text"/>						
Synchronization Interval	<input type="text" value="1"/>	Minute(s)					

Figure 4 Clock management

To refresh the clock of the displayed device, click “Refresh”.

In the “Select Time-Zone” dropdown box select the time zone where the device is located. When you select “Set Time Manually”, you can set the time of the device manually. When you select “Network Time Synchronization”, you can designate 3 SNTP servers for the device and set the interval of time synchronization.

4. CONFIGURATION OF THE PHYSICAL INTERFACE



Figure 1: Physical port configuration list

4.1. Configuring Port Description

If you click **Physical port config -> Port description Config** in the navigation bar, the **Port description Configuration** page appears, as shown in figure 2.

Port	Port Description
G0/1	<input type="text"/>
G0/2	<input type="text"/>
G0/3	<input type="text"/>
G0/4	<input type="text"/>

Figure 2: Port description configuration

You can modify the port description on this page and enter up to 120 characters. The description of the VLAN port cannot be set at present.

4.2. Configuring the Attributes of the Port

If you click **Physical port config -> Port attribute Config** in the navigation bar, the **Port Attribute Configuration** page appears, as shown in figure 3.

Port	Status	Speed	Duplex	Flow Control	Medium
G0/1	Up	Auto	Auto	Off	Auto
G0/2	Up	Auto	Auto	Off	Auto
G0/3	Up	Auto	Auto	Off	Auto
G0/4	Up	Auto	Auto	Off	Auto
G0/5	Up	Auto	Auto	Off	Auto
G0/6	Up	Auto	Auto	Off	Auto
G0/7	Up	Auto	Auto	Off	Auto
G0/8	Up	Auto	Auto	Off	Auto
G0/9	Up	Auto	Auto	Off	Auto
G0/10	Up	Auto	Auto	Off	Auto

Figure 3 Configuring the port attributes

On this page you can modify the on/off status, rate, duplex mode, flow control status and medium type of a port.

Note:

1. The Web page does not support the speed and duplex mode of the fast-Ethernet port.
2. After the speed or duplex mode of a port is modified, the link state of the port may be switched over and the network communication may be impaired.

4.3. Rate control

If you click **Physical port Config -> Port rate-limit Config** in the navigation bar, the **Port rate limit** page appears, as shown in figure 4.

Port	Receive Status	Receive Speed Unit	Receive Speed	Send Status	Send Speed Unit	Send Speed
G0/1	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/2	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/3	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/4	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/5	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/6	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/7	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/8	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/9	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)
G0/10	Disable	64kbps	(1-15625)	Disable	64kbps	(1-15625)

Figure 4: Port's rate limit

On this page you can set the reception speed and transmission speed of a port. By default, all ports have no speed limited.

4.4. Port mirroring

If you click **Physical port Config -> Port Mirror** in the navigation bar, the **Port Mirror Config** page appears, as shown in figure 4-5.

Mirrored Port	Mirror Mode
<input type="checkbox"/> G0/1	RX
<input checked="" type="checkbox"/> G0/2	TX

Figure 4-5 Port mirror configuration

Click the dropdown list on the right side of "Mirror Port" and select a port to be the destination port of mirror.

Click a checkbox and select a source port of mirror, that is, a mirrored port.

RX	The received packets will be mirrored to the destination port.
TX	The transmitted packets will be mirrored to a destination port.
RX & TX	The received and transmitted packets will be mirrored simultaneously.

4.5. Loopback Detection

If you click **Physical port Config -> Port loopback detection** in the navigation bar, the **Setting the port loopback detection** page appears, as shown in figure 4-6.

Port	Status	Keepalive Period
G0/1	Enable	3333 (0-32767)Seconds

Figure 4-6: Port loopback detection

You can set the loopback detection cycle on the **Loopback Detection** page.

4.6. Port security

4.6.1. IP Binding Configuration

If you click **Physical port Config -> Port Security -> IP bind** in the navigation bar, the **Configure the IP-Binding Info** page appears, as shown in figure 4-7.

Interface Name	Detail
G0/1	Detail

Figure 4-7 IP binding configuration

Click “Detail” and then you can conduct the binding of the source IP address for each physical port. In this way, the IP address that is allowed to visit the port will be limited.

	Serial number	Address	Operate
<input type="checkbox"/>	1	192.168.0.2	Edit
<input type="checkbox"/>	2	192.168.0.3	Edit

Figure 4-8 Setting the binding of the source IP address

4.6.2. MAC Binding Configuration

If you click **Physical port Config -> Port Security -> MAC bind** in the navigation bar, the **Configure the MAC-Binding Info** page appears, as shown in figure 4-10.

Interface Name	Detail
G0/1	Detail

Figure 4-9 MAC binding configuration

Click “Detail” and then you can conduct the binding of the source MAC address for each physical port. In this way, the MAC address that is allowed to visit the port will be limited.

	Serial number	Address	Operate
<input type="checkbox"/>	1	1234.1234.1234	Edit
<input type="checkbox"/>	2	1234.1234.1235	Edit

Figure 4-10 Setting the binding of the source MAC address

4.6.3. Setting the Static MAC Filtration Mode

If you click **Physical port Config -> Port Security -> Static MAC filtration mode** in the navigation bar, the **Configure the static MAC filtration mode** page appears, as shown in figure 4-11.

Interface Name	Port Mode	Static MAC Filtration Mode
G0/1	Access	Disable

Figure 4-11: Setting the static MAC filtration mode

On this page you can set the static MAC filtration mode. By default, the static MAC filter is disabled. Also, the static MAC filter mode cannot be set on ports in trunk mode.

4.6.4. Static MAC Filtration Entries

If you click **Physical port Config -> Port security -> Static MAC filtration entries** in the navigation bar, the **Setting the static MAC filtration entries** page appears.

Interface Name	Detail
G0/1	Detail

Figure 4-12: Static MAC filtration entry list

If you click “Detail”, you can conduct the binding of the source MAC address for each physical port. According to the configured static MAC filtration mode, the MAC address of a port can be limited, allowed or forbidden to visit.

Serial number	Filtration Mode	MAC Address	Operate
1	Disable	0001.0002.0003	Edit

Figure 4-13: Setting static MAC filtration entries

4.6.5. Setting the Dynamic MAC Filtration Mode

If you click **Physical port Config -> Port Security -> Dynamic MAC filtration mode** in the navigation bar, the **Configure the dynamic MAC filtration mode** page appears, as shown in figure 4-14.

Interface Name	Dynamic MAC Filtration Mode	Max MAC Address
G0/1	Disable	1 (1-4095)

Figure 4-14: Setting the dynamic MAC filtration mode

You can set the dynamic MAC filtration mode and the allowable maximum number of addresses on this page. By default, the dynamic MAC filtration mode is disabled and the maximum number of addresses is 1.

4.7. Storm control

In the navigation bar, click **Physical port Config -> Storm control**. The system then enters the page, on which the broadcast/multicast/unknown unicast storm control can be set.

4.7.1. Broadcast Storm Control

Port	Status	Threshold
G0/1	Disable	(1-1638400) 100PPS
G0/2	Disable	(1-1638400) 100PPS
G0/3	Disable	(1-1638400) 100PPS
G0/4	Disable	(1-1638400) 100PPS
G0/5	Disable	(1-1638400) 100PPS
G0/6	Disable	(1-1638400) 100PPS
G0/7	Disable	(1-1638400) 100PPS

Figure 5 Broadcast storm control

Through the dropdown boxes in the **Status** column, you can decide whether to enable broadcast storm control on a port. In the **Threshold** column you can enter the

threshold of the broadcast packets. The legal threshold range for each port is given behind the threshold.

4.7.2. Multicast Storm Control

G0/38	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/39	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/40	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/41	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/42	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/43	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/44	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/45	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/46	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/47	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
G0/48	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/1	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/2	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/3	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/4	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/5	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/6	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/7	Disable ▾	<input type="text"/>	(1-1638400) 100PPS
T1/8	Disable ▾	<input type="text"/>	(1-1638400) 100PPS

Apply

Reset

Figure 6 Setting the broadcast storm control

Through the dropdown boxes in the **Status** column, you can decide whether to enable multicast storm control on a port. In the **Threshold** column you can enter the threshold of the multicast packets. The legal threshold range for each port is given behind the threshold.

4.7.3. Unknown Unicast Storm Control

G0/39	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/40	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/41	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/42	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/43	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/44	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/45	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/46	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/47	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
G0/48	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/1	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/2	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/3	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/4	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/5	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/6	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/7	Disable <input type="button" value="v"/>		(1-1638400) 100PPS
T1/8	Disable <input type="button" value="v"/>		(1-1638400) 100PPS

Figure 7 Unknown unicast storm control


In the **Threshold** column you can enter the threshold of the broadcast packets. The legal threshold range for each port is given behind the threshold.

4.8. Port Protect Group Configuration

Click "Port Config" -> "Port Protect Group Config" in the navigation bar, and enter the configuration page of Port Protect Group List and Port Protect Group Interface Config.

4.8.1. Port Protect Group List

Click "Port Config" -> "Port Protect Group Config" -> "Port Protect Group List" in the navigation bar, and enter the configuration page of "Port Protect Group List".

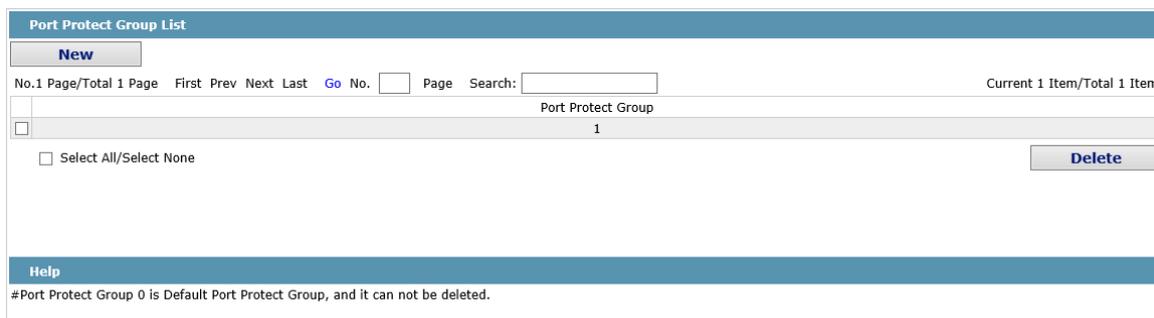

Click “New” to create a new port protect group, as shown in the above figure.

Tick one port protect group and delete it. The port protect group is 0 by default, which cannot be deleted.



4.8.2. Port Protect Group Interface Configuration

Click "Port Config" -> “Port Protect Group Config” -> “Port Protect Group Interface Config” in the navigation bar, and enter the configuration page of “Port Protect Group Interface Config”.

Port	Port Protect Group
g0/1	<input type="text"/>
g0/2	<input type="text"/>

The port protect group must be a created group. If one port has configured the default protect group, other ports can only be configured with the default protect group.

5. LAYER-2 CONFIGURATION

- Device Status**
- Basic Config**
- Port Config**
- L2 Config**
 - VLAN Config
 - VLAN Interface
 - GVRP Config
 - LLDP Config
 - STP Config
 - IGMP Snooping
 - Static ARP
 - Static MAC Config
 - DDM Config
 - Port Channel
 - Ring Protection
 - Multiple Ring Protection
 - BackupLink Config
 - DHCP Snooping Config
 - MTU Config
 - PDP Config
- L3 Config**
- Advanced Config**
- Network Mgr.**
- Diagnostic Tool**
- System Mgr.**

Figure 1: Layer-2 configuration list

5.6. VLAN Settings

5.1.1. VLAN List

If you click **Layer-2 Config -> VLAN Config** in the navigation bar, the **VLAN Config** page appears, as shown in figure 2.

	VLAN ID	VLAN Name	Operate
<input type="checkbox"/>	1	Default	Edit

Figure 2 VLAN configuration

The VLAN list will display VLAN items that exist in the current device according to the ascending order. In case of lots of items, you can look for the to-be-configured VLAN through the buttons like “Prev”, “Next” and “Search”.

You can click “New” to create a new VLAN.

You can also click “Edit” at the end of a VLAN item to modify the VLAN name and the port’s attributes in the VLAN.

If you select the checkbox before a VLAN and then click “Delete”, the selected VLAN will be deleted.

Note:

By default, a VLAN list can display up to 100 VLAN items. If you want to configure more VLANs through Web, please log on to the switch through the Console port or Telnet, enter the global configuration mode and then run the “**ip http web max-vlan**” command to modify the maximum number of VLANs that will be displayed.

5.1.2. VLAN Settings

If you click "New" or “Edit” in the VLAN list, the VLAN configuration page appears, on which new VLANs can be created or the attributes of an existent VLAN can be modified.

Revising VLAN Config					
VLAN ID		<input type="text" value="2"/>			
VLAN Name		<input type="text" value="VLAN002"/>			
Port	Default VLAN	Mode	Untag or not	Allow or not	
G0/1	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/2	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/3	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/4	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/5	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/6	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/7	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/8	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/9	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/10	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/11	<input type="text" value="1"/> <1-4094>	Access	No	Yes	
G0/12	<input type="text" value="1"/> <1-4094>	Access	No	Yes	

Figure 3 Revising VLAN configuration

If you want to create a new VLAN, enter a VLAN ID and a VLAN name; the VLAN name can be null.

Through the port list, you can set for each port the default VLAN , the VLAN mode (Trunk or Access), whether to allow the entrance of current VLAN packets and whether to execute the untagging of the current VLAN when the port works as the egress port.


Note:

When a port in Trunk mode serves as an egress port, it will untag the default VLAN by default.

5.2. GVRP Configuration

5.2.1. GVRP Global Attribute Configuration

If you click **Layer-2 Config -> GVRP Config -> GVRP Global Config** in the navigation bar, the **GVRP Global Config** page appears, as shown the following Figure.

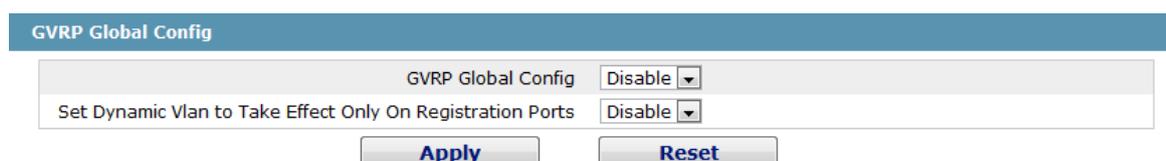

The screenshot shows the 'GVRP Global Config' page. It features two dropdown menus. The first is labeled 'GVRP Global Config' and is set to 'Disable'. The second is labeled 'Set Dynamic Vlan to Take Effect Only On Registration Ports' and is also set to 'Disable'. Below the dropdowns are two buttons: 'Apply' and 'Reset'.

Figure 9 GVRP Global Configuration

You can enable or disable the global GVRP protocol and sets whether the dynamic vlan is only effective on the registration interface.

5.2.2. Global Interface Attribute Configuration

If you click **Layer-2 Config -> GVRP Config -> GVRP Interface Config** in the navigation bar, the **GVRP Interface Config** page appears, as shown the following Figure.



Port	GVRP Status
G0/1	Enable

Figure 10 Global Interface Attribute Configuration

To enable or disable GVRP protocol on the GVRP interface configuration.

5.3. STP Configuration

5.3.1. STP Status Information

If you click **Layer-2 Config -> STP Config** in the navigation bar, the **STP Config** page appears, as shown in figure 10.

The screenshot displays the STP configuration interface. It is divided into three main sections:

- Root STP Config:** A table showing global attributes: Spanning Tree Priority (4096), MAC Address (00E0.0F8E.7025), Hello Time (2), Max Age (20), and Forward Delay (15).
- Local STP Config:** A form for configuring the local instance. It includes dropdown menus for Protocol Type (RSTP) and Spanning Tree Priority (32768), and input fields for Hello Time (2), Max Age (20), and Forward Delay (15). There are also buttons for 'Apply' and 'Reset'.
- STP Port's State:** A table showing the status of the STP port. It includes a table with columns: Interface, Role, State, Cost, Priority.Port ID, and Type. The table shows one entry for G0/1 with Role Root, State FWD, Cost 20000, Priority.Port ID 128.1, and Type P2p.

Figure 10 Configuring the global attributes of STP

The root STP configuration information and the STP port's status are only-read.

On the local STP configuration page, you can modify the running STP mode by clicking the Protocol type dropdown box. The STP modes include STP, RSTP and disabled STP.

The priority and the time need be configured for different modes.

Note:

The change of the STP mode may lead to the interruption of the network.

5.3.2. Configuring the Attributes of the STP Port

If you click the "Configure RSTP Port" option, the "Configure RSTP Port" page appears.

Port	Protocol Status	Priority(0~240)	Path-Cost(0~200000000)	Edge Port Property
G0/1	Enable	128	0	Auto
G0/2	Enable	128	0	Auto
G0/3	Enable	128	0	Auto
G0/4	Enable	128	0	Auto
G0/5	Enable	128	0	Auto
G0/6	Enable	128	0	Auto
G0/7	Enable	128	0	Auto
G0/8	Enable	128	0	Auto

Figure 11 Configuring the attributes of RSTP

The configuration of the attributes of the port is irrelative of the global STP mode. For example, if the protocol status is set to “Disable” and the STP mode is also changed, the port will not run the protocol in the new mode.

The default value of the path cost of the port is 0, meaning the path cost is automatically calculated according to the speed of the port. If you want to change the path cost, please enter another value.

5.4. IGMP-Snooping Configuration

5.4.1. IGMP-Snooping Configuration

If you click **Layer-2 Config -> IGMP snooping**, the IGMP-Snooping configuration page appears.

IGMP Snooping Config

Multicast Filtration Mode Transfer Unknown

IGMP Snooping Enable

Enable Auto Query Enable

[Apply](#)

Figure 12 IGMP-snooping configuration

On this page you can set whether to make a switch to forward unknown multicasts, whether to enable IGMP snooping, and whether to configure the switch as the querier of IGMP.

5.4.2. IGMP-Snooping VLAN List

If you click **Layer-2 Config -> IGMP snooping vlan list**, the **IGMP-Snooping VLAN list** page appears.

	VLAN ID	Status of the IGMP Snooping Vlan	Immediate-leave	Multicast Router's Port	Operate
<input type="checkbox"/>	1	Running	Disable	SWITCH(querier);	Edit

Figure 13: IGMP-snooping VLAN list

If you click **New**, IGMP-snooping VLAN configuration can be done. Through Web up to 8 physical ports can be set on each IGMP snooping VLAN. If you click **Cancel**, a selected IGMP-Snooping VLAN can be deleted; if you click **Edit**, you can modify the member port, running status and immediate-leave of IGMP-Snooping VLAN.

The screenshot displays the configuration page for an IGMP Snooping VLAN. At the top, the 'VLAN ID' is set to 2. Below this, the 'Status of the IGMP Snooping Vlan' is set to 'Enable' and 'Immediate-leave' is set to 'Disable'. The 'Configured Mrouter Port List' shows two ports: G0/1 and G0/12. The 'Available Port List' shows a range of ports from G0/10 to G0/20. Navigation buttons '>>' and '<<' are positioned between the two lists. At the bottom of the page, there are three buttons: 'Apply', 'Reset', and 'Go Back'.

Figure 14: Static routing port of IGMP VLAN

When an IGMP-Snooping VLAN is created, its VLAN ID can be modified; but when the IGMP-Snooping VLAN is modified, its VLAN ID cannot be modified.

You can click “>>” and “<<” to delete and add a routing port.

5.4.3. Static Multicast Address

If you click **Static multicast address**, the **Setting the static multicast address** page appears.

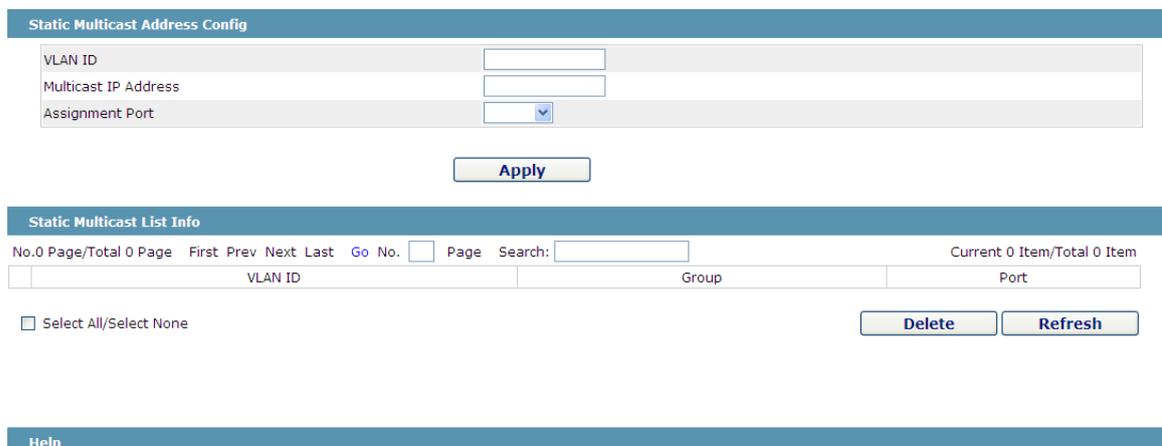


Figure 15 Multicast List

On this page, the currently existing static multicast groups and port groups in each static multicast group are shown.

Click “Refresh” to refresh the contents in the list.

5.4.4. Multicast List

Click the **Multicast List Info** option on the top of the page and the **Multicast List Info** page appears.



Figure 16 Multicast List

On this page the multicat groups, which are existent in the current network and are in the statistics of IGMP snooping, as well as port sets which members in each group belong to are displayed.

Click “Refresh” to refresh the contents in the list.

Note:

By default, a multicast list can display up to 15 VLAN items. You can modify the number of multicast items by running **ip http web igmp-groups** after you log on to the device through the Console port or Telnet.

5.5. Setting Static ARP

If you click **Layer-2 Config -> Static ARP Config**, the static ARP configuration page appears.

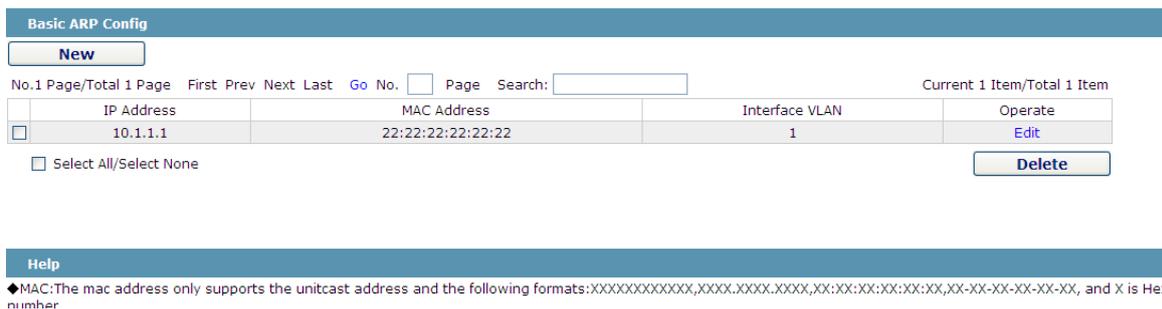


Figure 17 Displaying static ARP

You can click **New** to add an ARP entry. If the **Alias** column is selected, it means to answer the ARP request of the designated IP address.

If you click Edit, you can modify the current ARP entry.

If you click Cancel, you can cancel the chosen ARP entry.

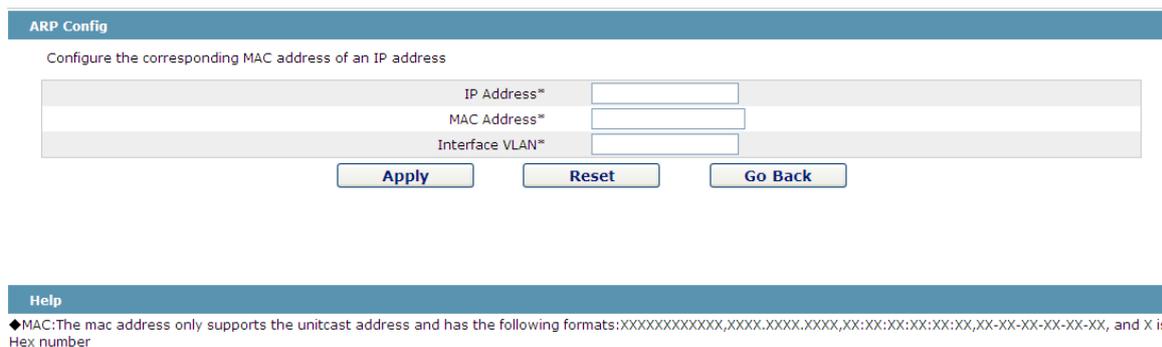


Figure 18 Setting static ARP

5.6. Static MAC Address Configuration

If you click **Layer-2 Config -> Static MAC Config -> Static MAC List**, the **Static MAC Address List Info** page appears.

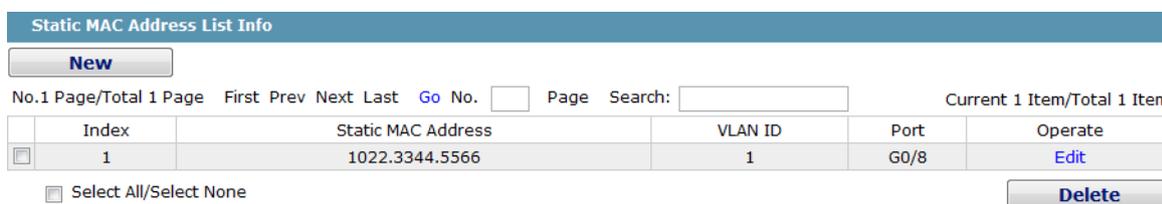


Figure 22 Setting Static MAC Address List Info

Click **New** to designate static MAC address and VLAN. The unicast MAC address can only configure one interface. Multiple MAC addresses can configure multiple interfaces.

Click **Edit** to modify the static MAC address.

Click **Delete** to delete the selected MAC address table.

Static MAC Address Config

Static MAC Address	<input type="text"/>	
VLAN ID	<input type="text"/>	
Configured Port List	Available Port List	
<input type="text"/>	G0/1 G0/2 G0/3 G0/4 G0/5 G0/6 G0/7 G0/8 G0/9 G0/10	
>> <<		
<input type="button" value="Apply"/>	<input type="button" value="Reset"/>	<input type="button" value="Go Back"/>

- Help
- ◆ Only one port can be configured for a unicast MAC address, while multiple MAC addresses can be configured for a multicast MAC address
 - ◆ MAC format: XXXX.XXXX.XXXX

Figure 19 Static MAC Address Config

5.7. LLDP Configuration

5.7.1. Configuring the Global Attributes of LLDP

If you click **Layer-2 Config -> LLDP Config -> LLDP Global Config** in the navigation bar, the **Basic Config of LLDP Protocol** page appears, as shown in the following Figure.

Basic Config of LLDP Protocol

Protocol State	<input type="text" value="Open the LLDP protocol"/>
HoldTime Settings	<input type="text" value="120"/> (0-65535)s
Reinit Settings	<input type="text" value="2"/> (2-5)s
Setting the packet transmission cycle	<input type="text" value="30"/> (5-65534)s

- Help
- ◆ HoldTime: Means the TTL(Time to live) of sending LLDP packets. Its default value is 120s.
 - ◆ Reinit: Means the delay of continuously sending LLDP packets. Its default value is 2s.

Figure11 Configuring the Global Attributes of LLDP

You can choose to enable LLDP or disable it. When you choose to disable LLDP, you cannot configure LLDP.

The “HoldTime” parameter means the ttl value of the packet that is transmitted by LLDP. Its default value is 120s.

The “Reinit” parameter means the delay of successive packet transmission of LLDP. Its default value is 2s.

5.7.2. LLDP Port Attribute Configuration

If you click **Layer-2 Config -> LLDP Config -> LLDP Interface Config** in the navigation bar, the **LLDP Port Config** page appears.

Port	Receive LLDP Packet	Send LLDP Packet
G0/1	Enable ▾	Enable ▾

Figure 12 Configuring the LLDP port

After the LLDP port is configured, you can enable or disable LLDP on this port.

5.8. DDM Configuration

If you click **L2 Config -> DDM Config** in the navigation bar, the **DDM configuration** page appears, as shown in figure 5-21.

The screenshot shows the 'DDM Config' page. At the top, there is a header 'DDM Config'. Below it, a control bar contains 'DDM' and a dropdown menu set to 'Enable'. Below the control bar are two buttons: 'Apply' and 'Reset'. At the bottom of the page, there is a 'Help' link.

Figure 5-21: DDM configuration

5.9. Link Aggregation Configuration

5.9.1. Port Aggregation Configuration


If you click **Advanced Config -> Link aggregation Config** in the navigation bar, the **Link aggregation Config** page appears, as shown in figure 22.

The screenshot shows the 'Port Aggregation Config' page. At the top, there is a header 'Port Aggregation Config' and a 'New' button. Below the header, there is a navigation bar with 'No.1 Page/Total 1 Page', 'First', 'Prev', 'Next', 'Last', 'Go', 'No.', 'Page', and 'Search:'. Below the navigation bar, there is a table with the following data:

No.	Aggregation Group	Mode	Configure port members	Valid port members	Speed	State	Operate
1	p1	Static	g0/1,g0/2,g0/6			down	Edit

Below the table, there is a checkbox 'Select All/Select None' and a 'Delete' button. At the bottom of the page, there is a 'Help' link and a note: '#Note: The physical attributes of all the aggregated ports shall be the same, including Speed, Duplex mode and Vlan'.

If you click New, an aggregation group can be created. Up to 32 aggregation groups can be configured through Web and up to 8 physical ports in each group can be aggregated. If you click Cancel, you can delete a selected aggregation group; if you click Modify, you can modify the member port and the aggregation mode.

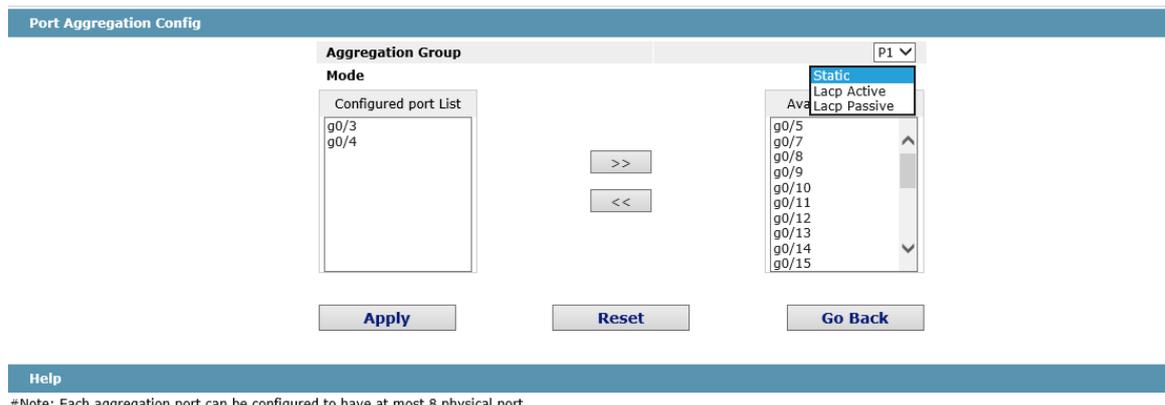


An aggregation group is selectable when it is created but is not selectable when it is modified.

When a member port exists on the aggregation port, you can choose the aggregation mode to be Static, LACP Active or LACP Passive.

You can click >> and << to delete and add a member port in the aggregation group.

5.9.2. Configuring Load Balance of Port Aggregation Group

Some models support aggregation group based load balance mode configuration and some not but can be configured in the global configuration mode.

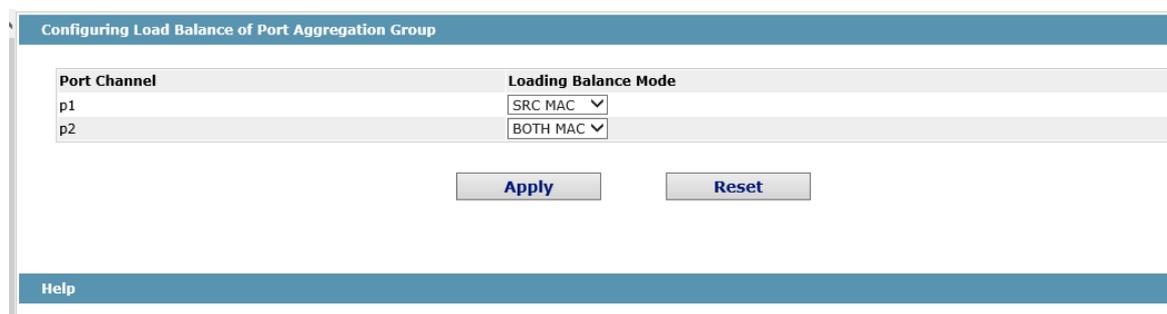

The user can adopt varied aggregation modes for different aggregation groups.

5.10. EAPS Ring Protection Configuration

5.10.1. EAPS Ring List

If you click Layer-2 Config -> Ring Protection ->EAPS Config, the EAPS Ring Config page appears.

ether-ring										
New										
No.1 Page/Total 1 Page First Prev Next Last Go No. <input type="text"/> Page Search: <input type="text"/>										Current 1 Item/Total 1 Item
Ring ID	Node Type	Ring Description	Control VLAN	Status	Hello Fail	Preforward	Primary Port/Forwarding/Link Status	Secondary Port/Forwarding/Link Status	Operate	
<input type="checkbox"/> 1	Master-node		3	RingFail	1 3	3	None/Blocking/Linkdown	None/Blocking/Linkdown	Edit	

In the list shows the currently configured EAPS ring, including the status of the ring, the forwarding status of the port and the status of the link.

Click “New” to create a new EAPS ring.

Click the “Operate” option to configure the “Time” parameter of the ring.

Note:

1. The system can support 8 EAPS rings.
2. After a ring is configured, its port, node type and control Vlan cannot be modified. If the port of the ring, the node type or the control Vlan need be adjusted, please delete the ring and then establish a new one.

5.10.2. EAPS Ring Configuration

If you click “New” on the EAPS ring list, or “Operate” on the right side of a ring item, the “Configure EAPS” page appears.

ether-ring	
Ring ID	0 <input type="text"/>
Node Type	Master Node <input type="text"/>
Ring Description	<input type="text"/>
Control VLAN	<input type="text"/>
Hello Time	1 (1-10)s
Fail Time	3 (3-30)s
Preforward Time	3 (3-30)s
Primary Port	None <input type="text"/>
Secondary Port	None <input type="text"/>
<input type="button" value="Apply"/> <input type="button" value="Reset"/> <input type="button" value="Go Back"/>	
Help	
#Ring Description: You can't input 'Enter'.	

Note:

If you want to modify a ring, on this page the node type, the control VLAN, the primary port and the secondary port cannot be modified.

In the dropdown box on the right of “Ring ID”, select an ID as a ring ID. The ring IDs of all devices on the same ring must be the same.

The dropdown box on the right of “Node Type” is used to select the type of the node. Please note that only one master node can be configured on a ring.

Enter a value between 1 and 4094 in the text box on the right of “Control VLAN” as the control VLAN ID. When a ring is established, the control VLAN will be automatically established too. Please note that if the designated control VLAN is 1 and the VLAN of the control device is also 1 the control device cannot access the control VLAN. Additionally, please do not enter a control VLAN ID that is same as that of another ring.

In the text boxes of “Primary Port” and “Secondary Port”, select a port as the ring port respectively. If “Node Type” is selected as “Transit-Node”, the two ports will be automatically set to transit ports.

Click “Apply” to finish EAPS ring configuration, click “Reset” to resume the initial values of the configuration, or click “Return” to go back to the EAPS list page.

5.11. MEAPS Configuration

5.11.1. MEAPS Ring Configuration

If you click Layer-2 Config -> Multiple Ring Protection -> Multiple Ring Protection on the navigation bar, the Multiple Ring Protection Configuration page appears.

Multiple Ring Protection Configuration														
New														
No.1 Page/Total 1 Page	First	Prev	Next	Last	Go No.	Page	Search:							Current 1 Item/Total 1 Item
Domain ID	Ring ID	Ring Type	Node Type	Control Vlan	Hello Time	Failed Time	Pre Forward Time	Port	Type	Port	Type	Operate		
<input type="checkbox"/>	2	2	Major Ring	Master Node	4	3	9	9	None	Primary-Port	None	Secondary-Port	Edit	
<input type="checkbox"/> Select All/Select None													Delete	

The list shows the current configured MEAPS ring, including Domain ID, Ring ID, Ring type, Node type, Control Vlan, Hello Time, Failed Time, Pre Forward Time, primary port and secondary port.

Click New to create a MEAPS ring.

Click Edit on the right and configure the time parameter and the primary and secondary port of the ring.

Note:

1. The system supports 4 MEAPS (0-3).
2. One domain supports 8 rings (0-7).
3. Once one MEAPS is configured, its Domain ID, ring ID, ring type, node type and control Vlan cannot be modified. If adjustment is needed, please delete the Ethernet ring and reset it.

5.11.2. MEAPS Ring Configuration

If you click New on the Multiple Ring Protection page or click Edit on the right, the New MEAPS Global Config page appears.

NewMEAPS Global Config

Domain ID*

Ring ID*

Ring Type*

Node Type*

Control Vlan*

Hello Time

Failed Time

Pre-Forward Time

Primary-Port

Secondary-Port

[Apply](#) [Reset](#) [Go Back](#)

Help

#Your web management may be interrupted as the control VLAN is modified to be the vlan interface that the web browser connects
#Only the master or transit node can be configured in the major ring
#The master node, transit node, edge node or assistant node can be configured in the sub ring
#The master or transit node can be configured in one ring, while the edge node or assistant edge node can be configured in several rings

Note:

In an existed MEAPS ring, its domain ID, ring ID, ring type, node type and control Vlan cannot be modified.

The primary ring can only be configured with the main node and the Transit node.

The secondary ring can be configured with the main node, the transit node, the edge node and the assistant edge node.

The primary node and the transit node can only be existed in one ring. The edge node and the assistant edge node can be existed in multiple rings simultaneously.

On the right drop box of “Primary-Port” and “Secondary-Port”, select one port respectively as the ring port or select None

5.12. Backup Link Protocol Configuration

5.12.1. Backup Link Protocol Global Configuration

If you click Layer-2 Config ->Backup Link Config ->Backup Link Protocol Global Config on the navigation bar, the Backup Link Protocol Global Config page appears.

BackupLink Protocol Global Config

[New](#)

No.1 Page/Total 1 Page First Prev Next Last Go No. Page Search:

Current 1 Item/Total 1 Item

No.	Group ID	Preemption Mode	Preemption Delay	Operate
<input type="checkbox"/>	1	No Preemption		Edit

Select All/Select None [Delete](#)

On the page, the current configured backup link groups are shown, including Preemption Mode and Preemption Delay.

Click New to create a new link backup group.

Click Edit on the right to configure Preemption Mode and Preemption Delay.

Note:

1. The system supports 8 link backup groups.
2. The Preemption mode determines the policy the primary port and the backup port forward packets.

5.12.2. Backup Link Protocol Interface Configuration

If you click Layer-2 Config -> Backup Link Protocol Config -> Backup Link Protocol Interface Config on the navigation bar, the Backup Link Protocol Global Config page appears.

Interface Name	Group ID	Interface Attribute	MMU Attribute	Shareload VLAN	Operate
g0/1					Edit
g0/2					Edit
g0/3					Edit
g0/4					Edit
g0/5					Edit
g0/6					Edit
g0/7					Edit
g0/8					Edit

This page shows the backup link group’s member ports, Interface Attribute, MMU Attribute, Shareload Vlan, etc.

Click Edit on the right to configure the Backup Link Protocol.

#Share Load VLAN can be Only Configured On The Backup Port

The backup link group which has configured the primary port cannot take other ports as its primary port. Likewise, the backup link group which has configured the backup port cannot take other ports as its backup port.

5.13. DHCP Snooping Configuration

5.13.1. DHCP Snooping Global Attribute Configuration

If you click Layer-2 Config -> DHCP Snooping Config -> DHCP Snooping Global Config on the navigation bar, the DHCP Snooping Global Config page appears.

DHCP Snooping Global Config	
DHCP Snooping Global Config	Disable ▾
TFTP Server IP To Save the Port Binding Relationship	<input type="text"/>
TFTP File Name To Save the Port Binding Relationship	<input type="text" value="iii"/> x
Update Interval To Save the Port Binding Relationship	<input type="text" value="30"/>

Enable global DHCP Snooping protocol, the switch is to monitor all DHCP packets and form the corresponding binding relationship. If the client obtains the address of a switch before the global DHCP Snooping protocol is enabled, the switch cannot add the corresponding binding relationship.

After the switch configuration is rebooted, the previously-configured interface binding will be lost. In this case, there is no binding relationship on this interface. After source IP address monitoring is enabled, the switch rejected forwarding all IP packets. After the TFTP server is configured for interface binding backup, the binding relationship will be backed up to the server through the TFTP protocol. After the switch is restarted, the switch automatically downloads the binding list from the TFTP server, securing the normal running of the network.

When backing up the interface binding relationship, the corresponding file name will be saved on the TFTP server. In this way, different switches can back up their own interface binding relationships to the same TFTP server.

The MAC-to-IP binding relationship on an interface changes dynamically. Hence, you need check whether the binding relationship updates after a certain interval. If the binding relationship updates, it need be backed up again. The default time interval is 30mins.

5.13.2. DHCP Snooping VLAN Attribute Configuration

If you click Layer-2 Config -> DHCP Snooping Config -> DHCP Snooping VLAN Config on the navigation bar, the DHCP Snooping VLAN Config page appears.

DHCP Snooping VLAN Config		
Enable DHCP Snooping VLAN	<input type="text" value="2-3,6"/>	
Enable Dynamic ARP Inspection VLAN	<input type="text" value="3"/> x	
Enable Verify Source VLAN	<input type="text"/>	
<input type="button" value="Apply"/> <input type="button" value="Reset"/>		

If DHCP snooping is enabled in a VLAN, the DHCP packets which are received from all distrusted physical ports in a VLAN will be legally checked. The DHCP response packets which are received from distrusted physical ports in a VLAN will then be dropped, preventing the faked or mis-configured DHCP server from providing address distribution services. For the DHCP request packet from distrusted ports, if the hardware address field in the DHCP request packet does not match the MAC address of this packet, the DHCP request packet is then thought as a fake packet which is used as the attack packet for DHCP DOS and then the switch will drop it.

When dynamic ARP monitoring is conducted in all physical ports of a VLAN, a received ARP packet will be rejected if the source MAC address and the source IP address of this packet do not match up with the configured MAC-IP binding relationship. The binding relationship on an interface can be dynamically bound by DHCP or configured manually. If no MAC addresses are bound to IP addresses on a physical interface, the switch rejects forwarding all ARP packets.

After source IP address monitoring is enabled in a VLAN, IP packets received from all physical ports in the VLAN will be rejected if their source MAC addresses and source IP addresses do not match up with the configured MAC-to-IP binding relationship. The binding relationship on an interface can be dynamically bound by DHCP or configured manually. If no MAC addresses are bound to IP addresses on a physical interface, the switch rejects forwarding all IP packets received from the physical interface.

5.13.3. DHCP Snooping Interface Attribute Configuration

If you click Layer-2 Config -> DHCP Snooping Config -> DHCP Snooping Interface Config on the navigation bar, the DHCP Snooping Interface Config page appears.

Port	DHCP Trust Port	ARP Inspection Trust Port	IP Source Trust Port
g0/1	<input type="button" value="Distrust"/>	<input type="button" value="Distrust"/>	<input type="button" value="Distrust"/>


If an interface is set to be a DHCP-trusting interface, the DHCP packets received from this interface will not be checked.

ARP monitoring is not enabled on those trusted interfaces. The interfaces are distrusted ones by default.

The source address detection function will not be enabled for the IP source address trust interface.

5.13.4. DHCP Snooping Manual Binding Configuration


If you click Layer-2 Config -> DHCP Snooping Config -> DHCP Interface Binding List Manual Config on the navigation bar, the DHCP Manual Port List page appears.

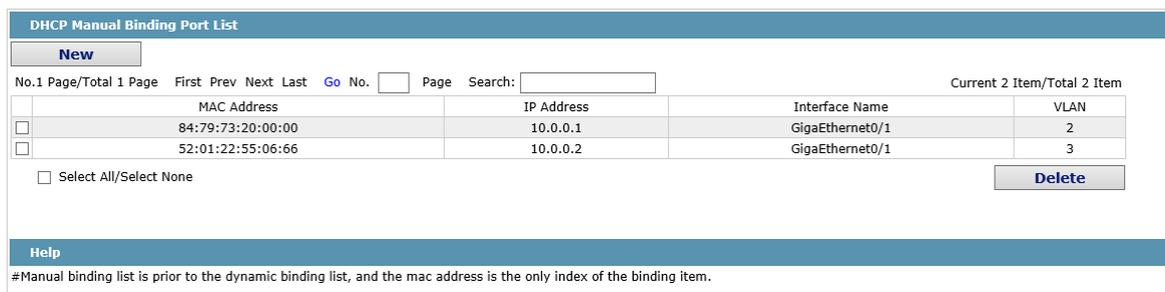

If a host does not obtain the address through DHCP, you can add the binding item on an interface of a switch to enable the host to access the network. You can run no ip source binding MAC IP to delete items from the corresponding binding list.

Note that the manually-configured binding items have higher priority than the dynamically-configured binding items. If the manually-configured binding item and the dynamically-configured binding item have the same MAC address, the manually-configured one updates the dynamically-configured one. The interface binding item takes the MAC address as the unique index. The interface binding item takes the MAC address as the unique index.

Click New to create DHCP Snooping manual Binding Port Item.

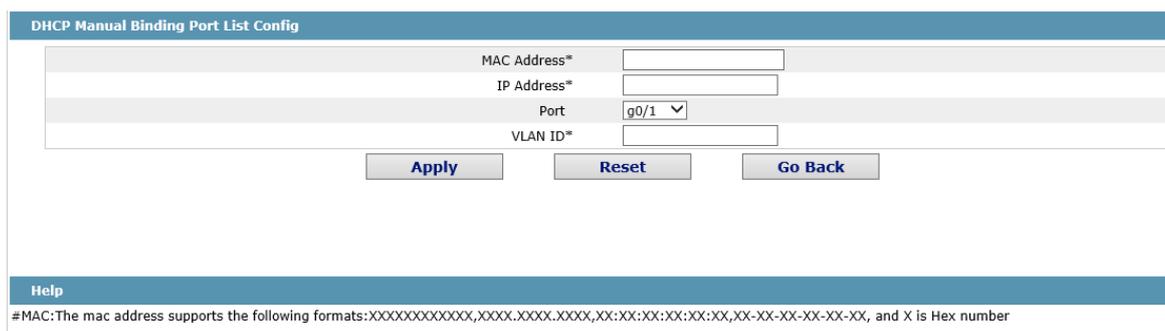

5.14. MTU Configuration

If you click Layer-2 Config -> MTU Config on the navigation bar, the MTU Config page appears.




You can set the size of the maximum transmission unit (MTU).

5.15. PDP Configuration

5.15.1. Configuring the Global Attributes of PDP

If you click Layer-2 Config -> PDP Config in the navigation bar, the Global PDP Config page appears, as shown in figure 4.

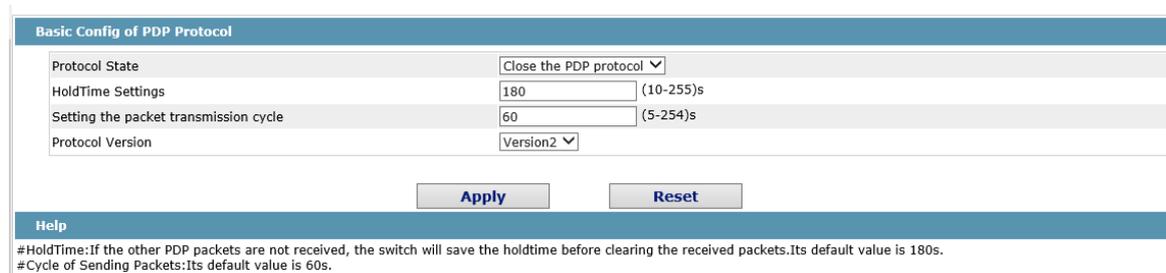


You can choose to enable PDP or disable it. When you choose to disable PDP, you cannot configure PDP.

The “HoldTime” parameter means the time to be saved before the router discards the received information if other PDP packets are not received.

5.15.2. Configuring the Attributes of the PDP Port

If you click Layer-2 Config -> PDP Config-> PDP port Config in the navigation bar, the Setting the attributes of the PDP port page appears, as shown in figure 5.

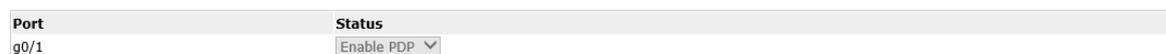

After the PDP port is configured, you can enable or disable PDP on this port.

5.16. STP Configuration

5.16.1. STP Status Information

If you click **Layer-2 Config -> STP Config** in the navigation bar, the **STP Config** page appears, as shown in figure 10.

The screenshot displays the STP Configuration interface, divided into three main sections:

- Root STP Config:** A table showing global attributes:

Spanning Tree Priority	4096
MAC Address	00E0.0F8E.7025
Hello Time	2
Max Age	20
Forward Delay	15
- Local STP Config:** A form for configuring the local instance:

Protocol Type	RSTP
Spanning Tree Priority	32768
MAC Address	FCFA.F72E.09A1
Hello Time	2 (1-10)s
Max Age	20 (6-40)s
Forward Delay	15 (4-30)s
BPDU Terminal	Disable

Buttons for **Apply** and **Reset** are located below the form.
- STP Port's State:** A table showing the status of the STP port:

Interface	Role	State	Cost	Priority.Port ID	Type
G0/1	Root	FWD	20000	128.1	P2p

Figure 10 Configuring the global attributes of STP

The root STP configuration information and the STP port's status are only-read.

On the local STP configuration page, you can modify the running STP mode by clicking the Protocol type dropdown box. The STP modes include STP, RSTP and disabled STP.

The priority and the time need be configured for different modes.

Note:

The change of the STP mode may lead to the interruption of the network.

5.16.2. Configuring the Attributes of the STP Port

If you click the "Configure RSTP Port" option, the "Configure RSTP Port" page appears.

Port	Protocol Status	Priority(0~240)	Path-Cost(0~200000000)	Edge Port Property
G0/1	Enable	128	0	Auto
G0/2	Enable	128	0	Auto
G0/3	Enable	128	0	Auto
G0/4	Enable	128	0	Auto
G0/5	Enable	128	0	Auto
G0/6	Enable	128	0	Auto
G0/7	Enable	128	0	Auto
G0/8	Enable	128	0	Auto

Figure 11 Configuring the attributes of RSTP

The configuration of the attributes of the port is irrelative of the global STP mode. For example, if the protocol status is set to “Disable” and the STP mode is also changed, the port will not run the protocol in the new mode.

The default value of the path cost of the port is 0, meaning the path cost is automatically calculated according to the speed of the port. If you want to change the path cost, please enter another value.

5.17. IGMP-Snooping Configuration

5.17.1. IGMP-Snooping Configuration

If you click **Layer-2 Config -> IGMP snooping**, the IGMP-Snooping configuration page appears.

IGMP Snooping Config

Multicast Filtration Mode Transfer Unknown

IGMP Snooping Enable

Enable Auto Query Enable

[Apply](#)

Figure 12 IGMP-snooping configuration

On this page you can set whether to make a switch to forward unknown multicasts, whether to enable IGMP snooping, and whether to configure the switch as the querier of IGMP.

5.17.2. IGMP-Snooping VLAN List

If you click **Layer-2 Config -> IGMP snooping vlan list**, the **IGMP-Snooping VLAN list** page appears.

	VLAN ID	Status of the IGMP Snooping Vlan	Immediate-leave	Multicast Router's Port	Operate
<input type="checkbox"/>	1	Running	Disable	SWITCH(querier);	Edit

Figure 13: IGMP-snooping VLAN list

If you click **New**, IGMP-snooping VLAN configuration can be done. Through Web up to 8 physical ports can be set on each IGMP snooping VLAN. If you click **Cancel**, a selected IGMP-Snooping VLAN can be deleted; if you click **Edit**, you can modify the member port, running status and immediate-leave of IGMP-Snooping VLAN.

The screenshot displays the configuration page for an IGMP-snooping VLAN. At the top, the 'VLAN ID' is set to 2. The 'Status of the IGMP Snooping Vlan' is set to 'Enable', and the 'Immediate-leave' option is set to 'Disable'. Below these settings are two lists: 'Configured Mrouter Port List' and 'Available Port List'. The 'Configured Mrouter Port List' contains the ports G0/1 and G0/12. The 'Available Port List' contains ports G0/10 through G0/20. Between the two lists are '>>' and '<<' buttons for moving ports between the lists. At the bottom of the page are three buttons: 'Apply', 'Reset', and 'Go Back'.

Figure 14: Static routing port of IGMP VLAN

When an IGMP-Snooping VLAN is created, its VLAN ID can be modified; but when the IGMP-Snooping VLAN is modified, its VLAN ID cannot be modified.

You can click “>>” and “<<” to delete and add a routing port.

5.17.3. Static Multicast Address

If you click **Static multicast address**, the **Setting the static multicast address** page appears.

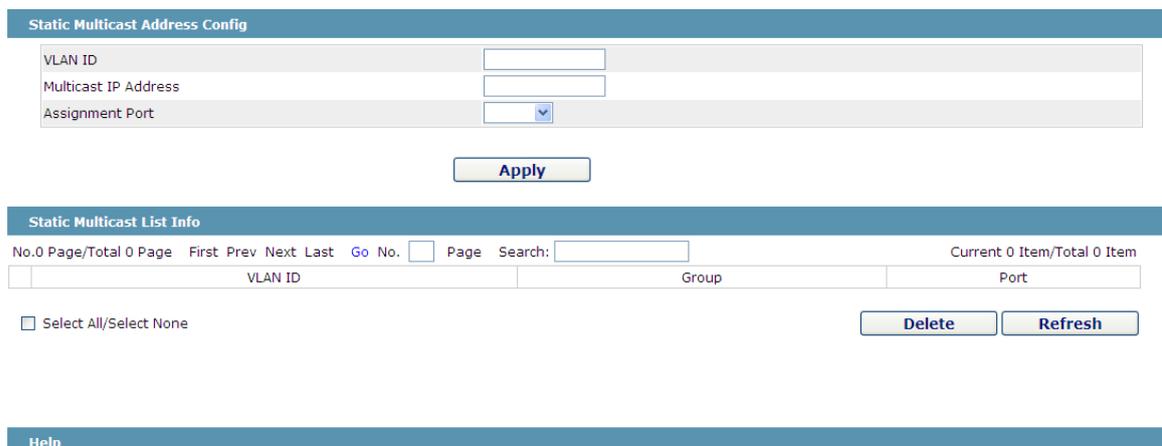


Figure 15 Multicast List

On this page, the currently existing static multicast groups and port groups in each static multicast group are shown.

Click “Refresh” to refresh the contents in the list.

5.17.4. Multicast List

Click the **Multicast List Info** option on the top of the page and the **Multicast List Info** page appears.



Figure 16 Multicast List

On this page the multicat groups, which are existent in the current network and are in the statistics of IGMP snooping, as well as port sets which members in each group belong to are displayed.

Click “Refresh” to refresh the contents in the list.

Note:

By default, a multicast list can display up to 15 VLAN items. You can modify the number of multicast items by running **ip http web igmp-groups** after you log on to the device through the Console port or Telnet.

5.18. Setting Static ARP

If you click **Layer-2 Config -> Static ARP Config**, the static ARP configuration page appears.

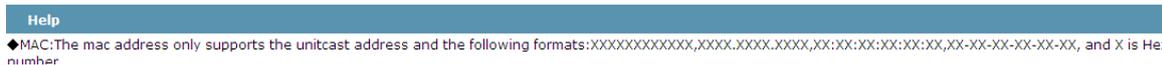


Figure 17 Displaying static ARP

You can click **New** to add an ARP entry. If the **Alias** column is selected, it means to answer the ARP request of the designated IP address.

If you click **Edit**, you can modify the current ARP entry.

If you click **Cancel**, you can cancel the chosen ARP entry.

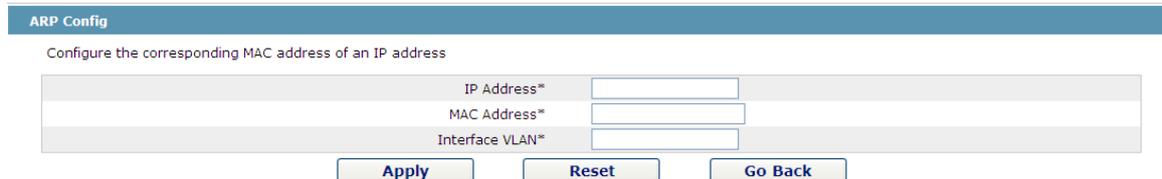


Figure 18 Setting static ARP

5.19. Ring Protection Configuration

5.19.1. EAPS Ring List

If you click **Layer-2 Config -> Ring protection Config**, the **EAPS ring list** page appears.

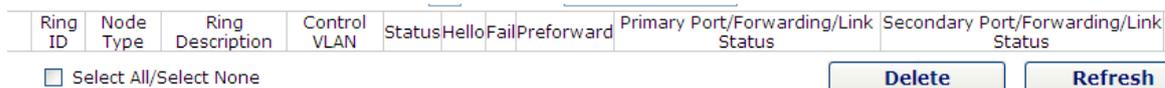


Figure 19 EAPS Ring List

In the list shows the currently configured EAPS ring, including the status of the ring, the forwarding status of the port and the status of the link.

Click "New" to create a new EAPS ring.

Click the "Operate" option to configure the "Time" parameter of the ring.

Note:

1. The system can support 8 EAPS rings.
2. After a ring is configured, its port, node type and control Vlan cannot be modified. If the port of the ring, the node type or the control Vlan need be adjusted, please delete the ring and then establish a new one.

5.19.2. EAPS Ring Configuration

If you click “New” on the EAPS ring list, or “Operate” on the right side of a ring item, the “Configure EAPS” page appears.

ether-ring	
Ring ID	0
Node Type	Master Node
Ring Description	
Control VLAN	
Hello Time	1 (1-10)s
Fail Time	3 (3-30)s
Preforward Time	3 (3-30)s
Primary Port	None
Secondary Port	None

Apply Reset Go Back

Figure 20 EAPS ring configuration

Note:

If you want to modify a ring, on this page the node type, the control VLAN, the primary port and the secondary port cannot be modified.

In the dropdown box on the right of “Ring ID”, select an ID as a ring ID. The ring IDs of all devices on the same ring must be the same.

The dropdown box on the right of “Node Type” is used to select the type of the node. Please note that only one master node can be configured on a ring.

Enter a value between 1 and 4094 in the text box on the right of “Control VLAN” as the control VLAN ID. When a ring is established, the control VLAN will be automatically established too. Please note that if the designated control VLAN is 1 and the VLAN of the control device is also 1 the control device cannot access the control VLAN. Additionally, please do not enter a control VLAN ID that is same as that of another ring.

In the text boxes of “Primary Port” and “Secondary Port”, select a port as the ring port respectively. If "Node Type" is selected as “Transit-Node”, the two ports will be automatically set to transit ports.

Click “Apply” to finish EAPS ring configuration, click “Reset” to resume the initial values of the configuration, or click “Return” to go back to the EAPS list page.

5.20. DDM Configuration

If you click **L2 Config -> DDM Config** in the navigation bar, the **DDM configuration** page appears, as shown in figure 5-21.

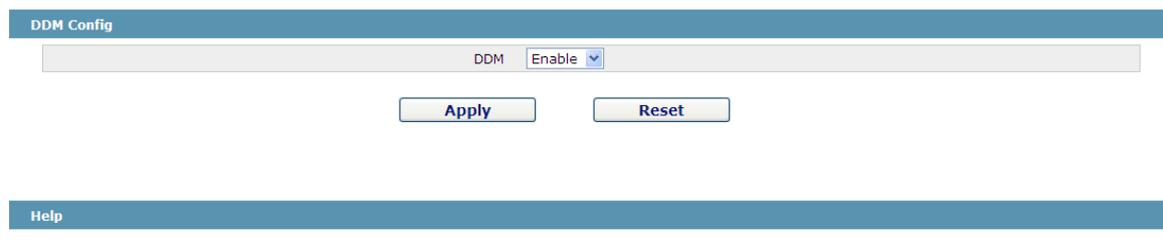


Figure 5-21: DDM configuration

6. LAYER-3 CONFIGURATION



Figure 1: Layer-3 configuration list

Note:
Only layer-3 switches have the layer-3 configuration.

6.6. Configuring the VLAN Interface

If you click **Layer-3 Config** -> **VLAN interface Config**, the **Configuring the VLAN interface** page appears.

	Name of the VLAN Interface	IP Attribute	IP Address	□□□□
<input type="checkbox"/>	1	Manual Config	192.168.1.79/24;	□□

Select All/Select None

Figure 2: Configuring the VLAN interface

Click **New** to add a new VLAN interface. Click **Cancel** to delete a VLAN interface. Click **Modify** to modify the settings of a corresponding VLAN interface.

When you click **New**, the name of the corresponding VLAN interface can be modified; but if you click **Modify**, the name of the corresponding VLAN interface cannot be modified.

VLAN Interface Config

IP Attribute

VLAN Interface Name*

IP Attribute* Manual Config

Primary IP Address

IP Address*

MASK address*

Secondary IP Address 1

IP Address*

MASK address*

Secondary IP Address 2

IP Address*

MASK address*

Help

The primary IP must be configured for the VLAN interface before the secondary IP is configured

Figure 3: VLAN interface configuration

Note:

Before the accessory IP of a VLAN interface is set, you have to set the main IP.

6.7. Setting the Static Route

If you click **Layer-3 Config -> Static route Config**, the **Static route configuration** page appears.

Static Routing Protocol Config

No. 0 Page/Total 0 Page First Prev Next Last Go No. Page Search: Current 0 Item/Total 0 Item

Default Route	Dest IP Segment	Dest IP Mask	Interface Type	VLAN Interface	Gateway's IP Address	Forwarding Routing Address	Distance metric	Routing Tag	Global	Specify the route description	Operate

Select All/Select None

Help

◆Global: The next-hop address is in the global routing table.

Figure 4 Displaying the static route

Click **Create** to add a static route.

If you click **Edit**, you can modify the current static route.

If you click **Cancel**, you can cancel the chosen static route.

Figure 5: Setting the static route

6.8. IGMP Agent

6.3.1. Enabling the IGMP Agent

If you click **Layer-3 Config -> IGMP agent**, the **IGMP agent** page appears.

Figure 6: Enabling the IGMP agent

On this page you can enable or disable the IGMP agent. It is noted that the IGMP agent can be enabled or disabled on a switch only after the IP IGMP-snooping function is enabled on the switch.

6.3.2. Setting the IGMP Agent

If you click **Layer-3 Config -> IGMP agent -> IGMP agent Config**, the **IGMP agent configuration** page appears. Click **New** to create a new IGMP agent.

Figure 7: Setting the IGMP agent

7. ADVANCED CONFIGURATION



Figure 1 A list of advanced configuration

7.6. QoS Configuration

7.1.1. Configuring QoS Port

If you click **Advanced Config -> QoS -> Configure QoS Port**, the **Port Priority Config** page appears.

Port	COS value
G0/1	0
G0/2	0
G0/3	0
G0/4	0
G0/5	
G0/6	
G0/7	
G0/8	
G0/9	
G0/10	
G0/11	

Figure 2 Configuring the QoS Port

You can set the CoS value by clicking the dropdown box on the right of each port and selecting a value. The default CoS value of a port is 0, meaning the lowest priority. If the CoS value is 7, it means that the priority is the highest.

7.1.2. Global QoS Configuration

If you click **Advanced Config -> QoS Config -> Global QoS Config**, the **Port's QoS parameter configuration** page appears.

The screenshot shows the 'QoS Config' interface. At the top, there is a 'Schedule Policy' dropdown menu set to 'sp'. Below this, there are eight queues arranged in a 2x4 grid. Each queue has a weight input field (all set to '1') and a bandwidth range (all set to '(0-15)').

Queue 1	Queue 2	Queue 3	Queue 4
1 (1-15)	1 (1-15)	1 (0-15)	1 (0-15)
Queue 5	Queue 6	Queue 7	Queue 8
1 (0-15)	1 (0-15)	1 (0-15)	1 (0-15)

Below the queues is a 'COS-to-queue map' table. The 'COS value' column ranges from 0 to 7, and the 'Queue' column has dropdown menus for Queue 1 through Queue 8.

COS value	Queue
0	Queue 1
1	Queue 2
2	Queue 3
3	Queue 4
4	Queue 5
5	Queue 6
6	Queue 7
7	Queue 8

At the bottom of the configuration area are 'Apply' and 'Reset' buttons. A 'Help' section at the very bottom contains two notes: 'If you want to configure the cos value of the interface, please goto QoS Interface Configuration.' and 'if the bandwidth of queue has been set to 0, the queue after this also must be set to 0'.

Figure 3 Configuring global QoS attributes

In WRR schedule mode, you can set the weights of the QoS queues. There are 4 queues, among which queue 1 has the lowest priority and queue 4 has the highest priority.

7.2. MAC Access Control List

7.2.1. Setting the Name of the MAC Access Control List

If you click **Advanced Config -> MAC access control list -> MAC access control list Config**, the MAC ACL configuration page appears.

The screenshot shows the 'MAC ACL Config' interface. At the top, there is a 'New' button. Below it, a table header indicates 'No.0 Page/Total 0 Page' and 'Current 0 Item/Total 0 Item'. The table has a column for 'Name of the MAC Access Control List' and an 'Operate' column. A 'Delete' button is located at the bottom right. There is also a 'Select All/Select None' checkbox.

Figure 4: MAC access control list configuration

Click **New** to add a name of the MAC access control list. Click **Cancel** to delete a MAC access control list.

The screenshot shows the 'Creating MAC ACL' form. It features a text input field labeled 'Name of the MAC ACL*'. Below the input field are three buttons: 'Apply', 'Reset', and 'Go Back'.

Figure 5: Setting the name of MAC access control list

7.2.2. Setting the Rules of the MAC Access Control List

If you click **Modify**, the corresponding MAC access control list appears and you can set the corresponding rules for the MAC access control list.

The screenshot shows the 'MAC ACLmyacl' interface. It has a 'New' button at the top. Below it, a table header indicates 'No.1 Page/Total 1 Page' and 'Current 1 Item/Total 1 Item'. The table contains one row with the following data: Authority: permit, Src MAC Type: host, Src MAC: 0001.0002.0003, Src MAC Mask: (empty), Dst MAC Type: any, Dst MAC: (empty), Dst MAC Mask: (empty). The 'Operate' column has an 'Edit' button. There is also a 'Go Back' and 'Delete' button at the bottom right, and a 'Select All/Select None' checkbox.

Figure 6: Specific MAC access control list configuration

Click **New** to add a rule of the MAC access control list. Click **Cancel** to delete a rule of the MAC access control list.

The screenshot shows the 'New MAC ACL Regulation' form. It has a title 'NewMAC ACLmyaclItem'. The form contains several fields: Authority (dropdown menu with 'permit' selected), Src MAC Type* (dropdown menu with 'host' selected), Src MAC* (text input with '000100020003'), Src MAC Mask* (text input), Dst MAC Type* (dropdown menu with 'any' selected), Dst MAC* (text input), and Dst MAC Mask* (text input). At the bottom, there are three buttons: 'Apply', 'Reset', and 'Go Back'. Below the form is a 'Help' section with a note: '◆MAC: the valid mac address can be one of the following formats: XXXXXXXXXXXX, XXXX.XXXX.XXXX, XX:XX:XX:XX:XX:XX, and XX-XX-XX-XX-XX-XX, among which X is a Hex number'.

Figure 7: Setting the Rules of the MAC Access Control List

7.2.3. Applying the MAC Access Control List

If you click **Advanced Config -> MAC access control list -> Applying the MAC access control list**, the **Applying the MAC access control list** page appears.

Port	Egress ACL	Ingress ACL
G0/1	<input type="text"/>	<input type="text"/>
G0/2	<input type="text"/>	<input type="text"/>
G0/3	<input type="text"/>	<input type="text"/>
G0/4	<input type="text"/>	<input type="text"/>
G0/5	<input type="text"/>	<input type="text"/>
G0/6	<input type="text"/>	<input type="text"/>
G0/7	<input type="text"/>	<input type="text"/>

Figure 8: Applying the MAC access control list

7.3. IP Access Control List

7.3.1. Setting the Name of the IP Access Control List

If you click **Advanced Config -> IP access control list -> IP access control list Config**, the IP ACL configuration page appears.

IP ACL Config		
New		
No.1 Page/Total 1 Page	First Prev Next Last Go No. <input type="text"/> Page	Search: <input type="text"/>
		Current 2 Item/Total 2 Item
<input type="checkbox"/>	acla	extended
<input type="checkbox"/>	myacl	standard

Figure 9: IP access control list configuration

Click **New** to add a name of the IP access control list. Click **Cancel** to delete an IP access control list.

Creating the IP ACL

Name of the IP ACL*

Attribute

Figure 10: Creating a name of the IP access control list

If you click **Modify**, the corresponding IP access control list appears and you can set the corresponding rules for the IP access control list.

7.3.2. Setting the Rules of the IP Access Control List

- Standard IP access control list

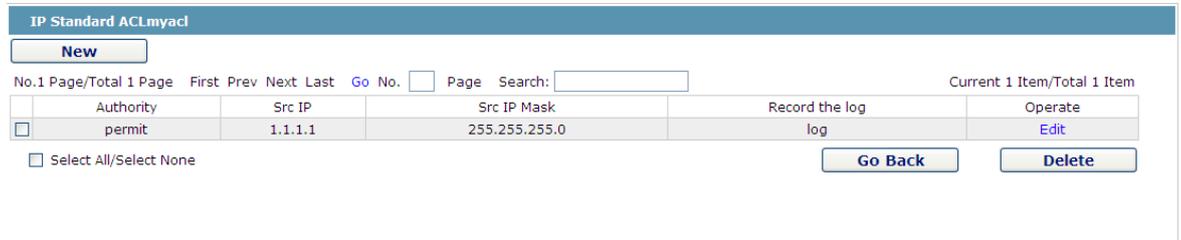


Figure 11: Standard IP access control list

Click **New** to add a rule of the IP access control list. Click **Cancel** to delete a rule of the IP access control list. If you click **Modify**, the corresponding IP access control list appears and you can set the corresponding rules for the IP access control list.

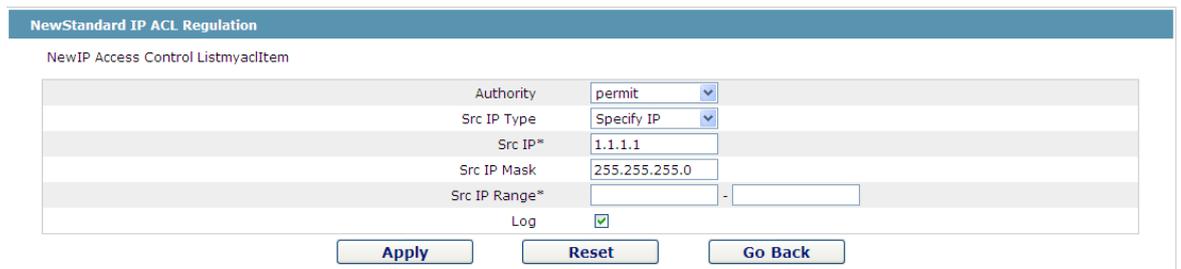


Figure 12: Setting the Rules of the standard IP access control list

- Extended IP access control list

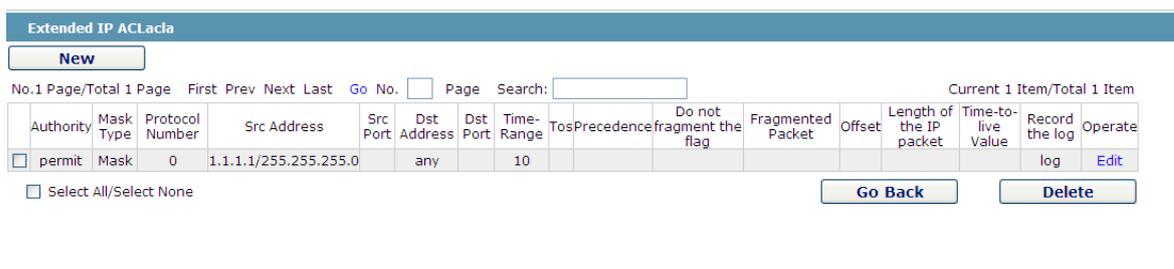


Figure 13: Extended IP access control list

Click **New** to add a rule of the IP access control list. Click **Cancel** to delete a rule of the IP access control list. If you click **Modify**, the corresponding IP access control list appears and you can set the corresponding rules for the IP access control list.

Authority	permit
Mask Type	Mask
Protocol Number*	0
Src IP Type	Specify IP
Src IP*	1.1.1.1
Src IP Mask*	255.255.255.0
Src Interface Vlan*	
Src IP Range*	
Src Port	
Src Port Range	
Dst IP Type	any
Dst IP*	
Dst IP Mask*	
Dst Interface Vlan*	
Dst IP Range*	
Dst Port	
Dst Port Range	
Time-Range	10
Tos	
Precedence	
Do not fragment	
Fragmented Packet	
Offset	
Length of the IP Packet	
Time-to-live Value	
Log	<input checked="" type="checkbox"/>
Location	1

Figure 14: Setting the Rules of the extended IP access control list

7.3.3. Applying the IP Access Control List

If you click **Advanced Config -> IP access control list -> Applying the IP access control list**, the **Applying the IP access control list** page appears.

Port	Egress ACL	Ingress ACL
G0/1	myacl	
G0/2		acla
G0/3		
G0/4		
G0/5		
G0/6		
G0/7		
G0/8		

Figure 15: Applying the IP access control list

8. NETWORK MANAGEMENT CONFIGURATION

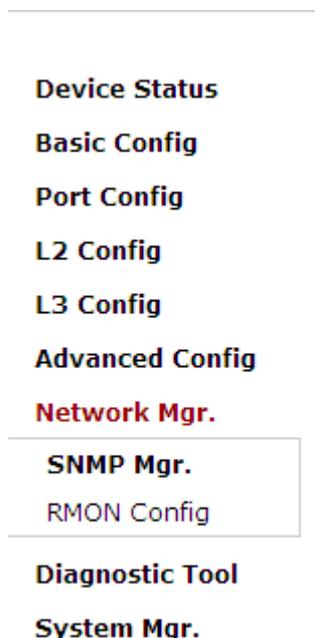


Figure 1: Network management configuration list

8.6. SNMP Configuration

If you click **Network management Config -> SNMP management** in the navigation bar, the **SNMP management** page appears, as shown in figure 2.

8.1.1. SNMP Community Management

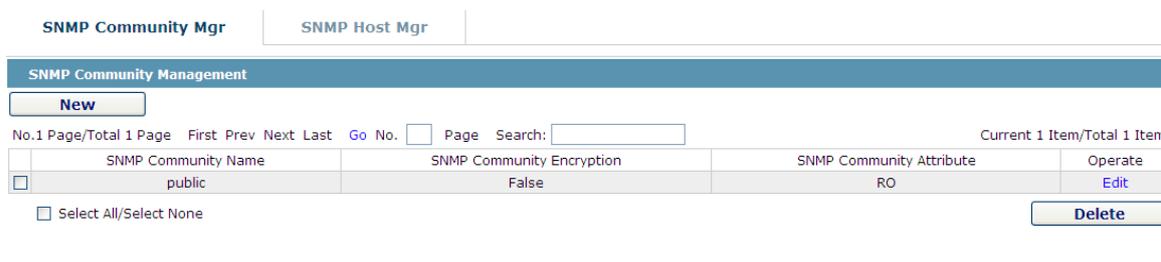


Figure 2 SNMP community management

On the SNMP community management page, you can know the related configuration information about SNMP community.

You can create, modify or cancel the SNMP community information, and if you click **New** or **Edit**, you can switch to the configuration page of SNMP community.

Figure 4.2 SNMP community management settings

On the SNMP community management page you can enter the SNMP community name, select the attributes of SNMP community, which include Read only and Read-Write.

8.1.2. SNMP Host Management

Figure 4 SNMP host management

On the SNMP community host page, you can know the related configuration information about SNMP host.

You can create, modify or cancel the SNMP host information, and if you click **New** or **Edit**, you can switch to the configuration page of SNMP host.

Figure 5 SNMP host management settings

On the SNMP host configuration page, you can enter **SNMP Host IP**, **SNMP Community**, **SNMP Message Type** and **SNMP Community Version**. **SNMP Message Type** includes **Traps** and **Informs**, and as to version 1, **SNMP Message Type** does not support **Informs**.

8.2. RMON

8.2.1. RMON Statistic Information Configuration

If you click **Network Management Config -> RMON -> RMON Statistics -> New**, the **RMON Statistics** page appears.

Interface Statistics Config

Interface	<input type="text" value="G0/1"/>	
Index	<input type="text" value="1"/>	(1-65535)
Owner	<input type="text" value="demon"/>	

Help

- ◆ It must be configured in interface mode, which is used to enable the interface statistics
- ◆ The string you totally entered is less than or equal to 255 characters

Figure 6 Configuring the RMON statistic information

You need to set a physical port to be the reception terminal of the monitor data.

The index is used to identify a specific interface; if the index is same to that of the previous application interface, it will replace that of the previous application interface.

At present, the monitor statistic information can be obtained through the command line “show rmon statistics”, but the Web does not support this function.

8.2.2. RMON History Information Configuration

If you click **Network Management Config -> RMON -> RMON history -> New**, the **RMON history** page appears.

Interface History config

Interface	<input type="text" value="G0/1"/>	
Index	<input type="text"/>	(1-65535)
Sampling Number	<input type="text" value="50"/>	(1-65535)
Sampling Interval	<input type="text" value="1800"/>	(1-3600)
Owner	<input type="text" value="config"/>	Enter less than 31 characters*

Help

- ◆ Sampling Number means how many history items must be saved recently

Figure 7 Configuring the RMON history information

You need to set a physical port to be the reception terminal of the monitor data.

The index is used to identify a specific interface; if the index is same to that of the previous application interface, it will replace that of the previous application interface.

The sampling number means the items that need be reserved, whose default value is 50.

The sampling interval means the time between two data collection, whose default value is 1800s.

At present, the monitor statistic information can be obtained through the command line “show rmon history”, but the Web does not support this function.

8.2.3. RMON Alarm Information Configuration

If you click **Network Management Config -> RMON -> RMON Alarm -> New**, the **RMON Alarm** page appears.

Field	Value	Range/Constraint
Index	1	(1-65535)
MIB Node	IfinOctets	
OID	1.3.6.1.2.1.2.2.1.10	
Interface	G0/1	
Alarm type	absolute	
Sampling Interval	5	(1-2147483647)
Rising Threshold	5	(-2147483648 - 2147483647)
Rising Event Index	2	(1-65535)
Falling Threshold	6	(-2147483648 - 2147483647)
Falling Event Index	3	(1-65535)
Owner	default	Enter less than 31 characters*

Apply **Go Back**

Help

- ◆The owner can be empty
- *◆The string you totally entered is limited in 255 characters

Figure 8 Configuring the RMON alarm information

The index is used to identify a specific alarm information; if the index is same to the previously applied index, it will replace the previous one.

The MIB node corresponds to OID.

If the alarm type is **absolute**, the value of the MIB object will be directly monitored; if the alarm type is **delta**, the change of the value of the MIB object in two sampling will be monitored.

When the monitored MIB object reaches or exceeds the rising threshold, the event corresponding to the index of the rising event will be triggered.

When the monitored MIB object reaches or exceeds the falling threshold, the event corresponding to the index of the falling event will be triggered.

8.2.4. RMON Event Configuration

If you click **Network Management Config -> RMON -> RMON Event -> New**, the **RMON event** page appears.

RMON Event Config

Index	<input type="text"/>	(1-65535)
Owner	<input type="text"/>	
Description	<input type="text"/>	
Enable log	<input type="checkbox"/>	
Enable trap	<input type="checkbox"/>	
Community	<input type="text"/>	

Help

- ◆ If the log is enabled, the items will be added to the log table at the trigger of the event.
- ◆ If the trap is enabled, the trap will be generated with the event community name.
- *◆ The string you totally entered is less than 255 characters

Figure 9 RMON event configuration

The index corresponds to the rising event index and the falling event index that have already been configured on the **RMON alarm config** page.

The owner is used to describe the descriptive information of an event.

"Enable log" means to add an item of information in the log table when the event is triggered.

"Enable trap" means a trap will be generated if the event is triggered.

9. DIAGNOSIS TOOLS



Figure 1: Diagnosis tool list

9.6. Ping

8.2.5. Ping

If you click **Diagnosis Tools -> Ping**, the **Ping** page appears.

Ping

Ping is a typical network tool, which is used to identify the states of some network functions. The states of network functions are the basis of regular network diagnosis. Ping is used to check whether the peer is reachable. If Ping transmits a packet to the host and receives a response from the peer, the peer is reachable.

PING test-->

Destination address*	<input type="text"/>
Source IP address	<input type="text"/> (An option which can be null)
Size of the PING packet	<input type="text"/> (36-20000) (An option which can be null)

PING

Help

- ◆The ping program can test whether a destination can be reached, or it can test the packet loss to reach a destination.
- ◆Destination address: Enter the to-be-tested destination address.
- ◆Source IP: Source IP.
- ◆Packet's size: Designate the size of a packet when the packet is used to ping a destination. It is optional and cannot be configured.

Figure 2 Ping

Ping is used to test whether the switch connects other devices.

If a Ping test need be conducted, please enter an IP address in the “Destination address” textbox, such as the IP address of your PC, and then click the “PING” button. If the switch connects your entered address, the device can promptly return a test result to you; if not, the device will take a little more time to return the test result.

“Source IP address” is used to set the source IP address which is carried in the Ping packet.

“Size of the PING packet” is used to set the length of the Ping packet which is transmitted by the device.

10. SYSTEM MANAGEMENT



Figure 1 Navigation list of system management

10.6. User Management

10.1.1. User List

If you click **System Manage -> User Manage**, the **User Management** page appears.

User Management

No.1 Page/Total 1 Page First Prev Next Last Go No. Page Search: Current 1 Item/Total 1 Item

	User name	User permission	Pass-Group	Authen-Group	Author-Group	User Status	Operate
<input type="checkbox"/>	admin	System administrator				Normal	Edit

Select All/Select None

Help

- ◆Note: When only one Admin user exists, You cannot delete the current administrator user. Otherwise, you cannot log on to the switch and configure it.
- ◆Users can be divided into the Admin user and the limited user according to the permission. The Admin user can use all functions of the switch, including browsing, configuring and remote login, while the limited user only has the permission to browse the switch's running state through the WEB page.
- ◆Click the 'New' button to create a new user.

Figure 2 User list

You can click “New” to create a new user.

To modify the permission or the login password, click “Edit” on the right of the user list.

Note:

1. Please make sure that at least one system administrator exists in the system, so that you can manage the devices through Web.
 2. The limited user can only browse the status of the device.
-

10.1.2. Establishing a New User

If you click “New” on the **User Management** page, the **Creating User** page appears.

The screenshot shows a web form titled "User Management" with a sub-header "Creating User". The form contains the following fields and buttons:

User name	<input type="text"/>
Password	<input type="password"/>
Confirming password	<input type="password"/>
Pass-Group	<input type="text"/>
Authen-Group	<input type="text"/>
Author-Group	<input type="text"/>

Buttons:

Figure 3 Creating new users

In the “User name” text box, enter a name, which contains letters, numbers and symbols except “?”, “\”, “&”, “#” and the "Space" symbol. “\” “&” “#” and characters other than spaces.

In the “Password” textbox enter a login password, and in the “Confirming password” textbox enter this login password again.

In the “User permission” dropdown box set the user's permission. The “System administrator” user can browse the status of the device and conduct relevant settings, while the limited user can only browse the status of the device.

10.2. Log Management

If you click **System Manage -> Log Manage**, the **Log Management** page appears.

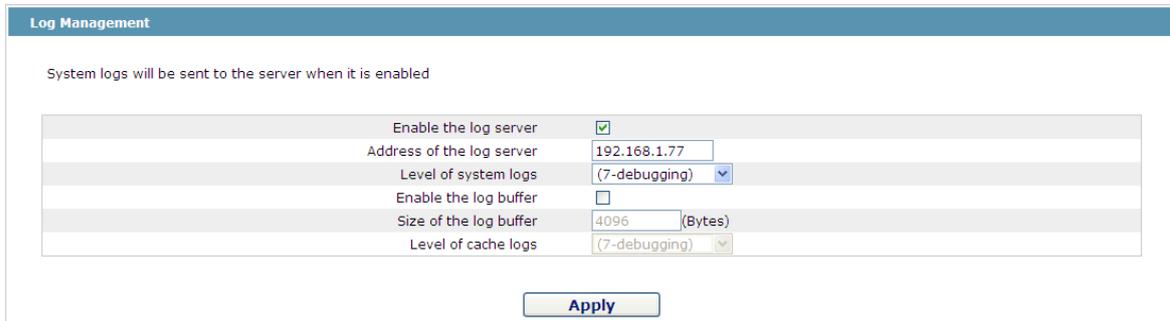


Figure 4 Log management

If “Enabling the log server” is selected, the device will transmit the log information to the designated server. In this case, you need enter the address of the server in the “Address of the system log server” textbox and select the log's grade in the “Grade of the system log information” dropdown box.

If “Enabling the log buffer” is selected, the device will record the log information to the memory. By logging on to the device through the Console port or Telnet, you can run the command “show log” to browse the logs which are saved on the device. The log information which is saved in the memory will be lost after rebooting. Please enter the size of the buffer area in the “Size of the system log buffer” textbox and select the grade of the cached log in the “Grade of the cache log information” dropdown box.

10.3. Managing the Configuration Files

If you click **System Manage -> Configuration file**, the **Configuration file** page appears.

10.3.1. Exporting the Configuration Information

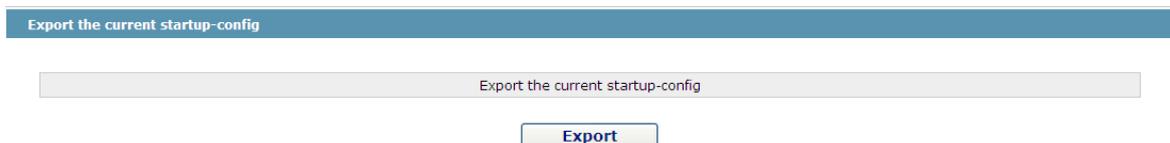


Figure 5 Exporting the configuration file

The current configuration file can be exported, saved in the disk of PC or in the mobile storage device as the backup file.

To export the configuration file, please click the “Export” button and then select the “Save” option in the pop-up download dialog box.

The default name of the configuration file is “startup-config”, but you are suggested to set it to an easily memorable name.

10.3.2. Importing the Configuration Information

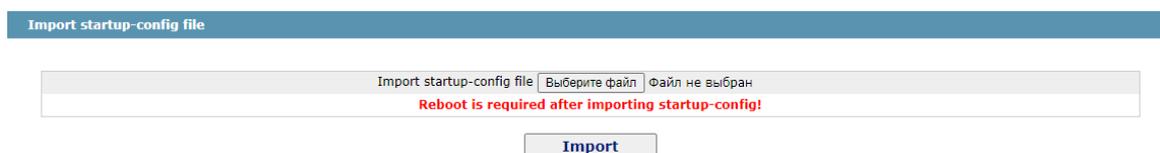


Figure 6 Importing the configuration files

You can import the configuration files from PC to the device and replace the configuration file that is currently being used. For example, by importing the backup configuration files, you can resume the device to its configuration of a previous moment.

Note:

1. Please make sure that the imported configuration file has the legal format for the configuration file with illegal format cannot lead to the normal startup of the device.
2. If error occurs during the process of importation, please try it later again, or click the “Save All” button to make the device re-establish the configuration file with the current configuration, avoiding the incomplete file and the abnormality of the device.
3. After the configuration file is imported, if you want to use the imported configuration file immediately, do not click “Save All”, but reboot the device directly.

10.4. Software Management

If you click **System Manage -> Software Upgrade**, the software management page appears.

10.4.1. Backing up the IOS Software



Figure 7 Backing up IOS

On this page the currently running software version is displayed. If you want to backup IOS, please click “Backuping IOS”; then on the browser the file download dialog box appears; click “Save” to store the IOS file to the disk of the PC, mobile storage device or other network location.

Note:

IOS Default file name “Switch.bin”, It is recommended to change it to a name that is easy to identify and find when backing up.

10.4.2. Upgrading the IOS Software

Note:

1. Please make sure that your upgraded IOS matches the device type, because the matchable IOS will not lead to the normal startup of the device.
2. The upgrade of IOS probably takes one to two minutes; when the “updating” button is clicked, the IOS files will be uploaded to the device.
3. If errors occur during upgrade, please do not restart the device or cut off the power of the device, or the device cannot be started. Please try the upgrade again.
4. After the upgrade please save the configuration and then restart the device to run the new IOS.

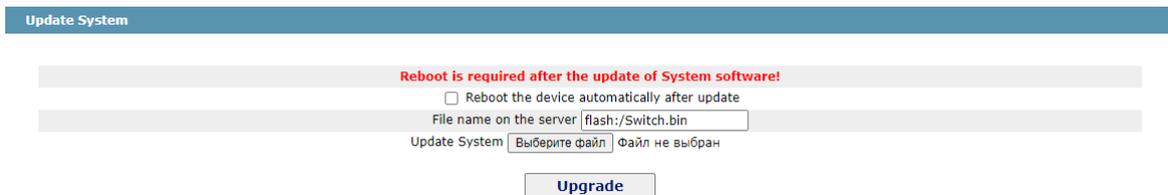


Figure 8 Upgrading the IOS software

The upgraded IOS is always used to solve the already known problems or to perfect a specific function. If you device run normally, do not upgrade your IOS software frequently.

If IOS need be upgraded, please first enter the complete path of the new IOS files in the textbox on the right of “Upgrading IOS”, or click the “Browsing” button and select the new IOS files on your computer, and then click “Updating”.

10.5. Resuming Initial Configuration

If you click **System Manage -> Resume Config**, the **Resuming the original configuration** page appears.

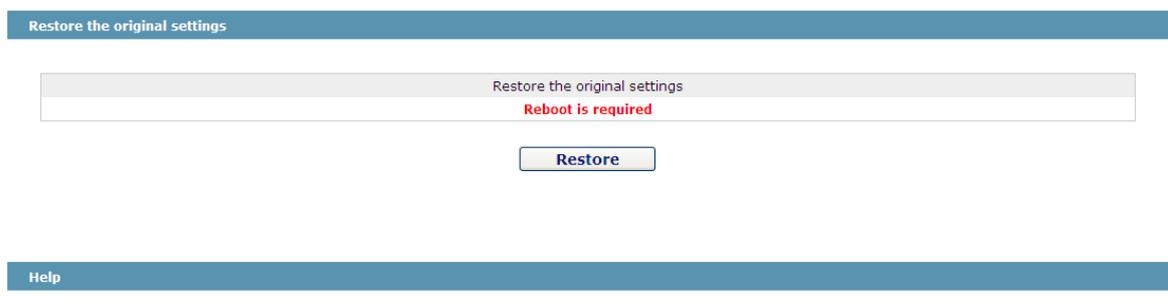


Figure 9 Resuming the original configuration

Note:

1. If you click the “Resume” button, the current configuration will be replaced by the original configuration, which will take effect after rebooting.
2. Before rebooting the device still works under the current configuration, and if you click “Save All” at the moment, the current configuration will replace the original configuration. The original configuration, therefore, cannot take effect after rebooting.
3. After the rebooting is done and the original configuration takes effect, the Web access of the device will be automatically started. The address of Vlan 1 is 192.168.0.1/255.255.255.0, and the username and password are both “admin”.

To resume the original configuration, click “Resume” and then reboot the device.

10.6. Rebooting the Device

If you click **System Manage -> Reboot Device**, the **Rebooting** page appears.

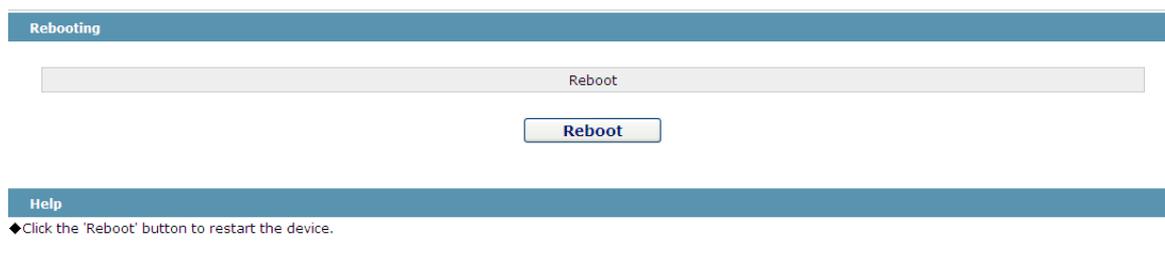


Figure 10 Rebooting the device

If the device need be rebooted, please first make sure that the modified configuration of the device has already been saved, and then click the “Reboot” button.