



MANUAL

**QSW-9000**

## Contents

1. OLT SLOT MANAGEMENT	3
1.1 OLT slot introduction	3
1.1.1. Configure OLT slot Management	3
1.1.1.1. OLT slot configuration tasks	3
1.1.1.2. Configure slot linecard type	3
1.1.1.3. Show slot linecard type	4
1.1.1.4. Show ONT under OLT	4
1.1.1.5. Configuration Examples	5

# 1. OLT SLOT MANAGEMENT

## 1.1 OLT slot introduction

QSW-9000-04 is a flexible configured box-style device, which can provide 2 main control board (master and secondary) , 4 hot-swapped slots (slot number 2-5). There are 3 types of interface linecard for use.

### 1.1.1. Configure OLT slot Management

#### 1.1.1.1. OLT slot configuration tasks

Table 1-1 OLT slot configuration task

Configuration Task		Description	Details
<b>OLT slot basic configuration</b>	<b>Configure slot linecard type</b>	Mandatory	<a href="#">1.2.2</a>
Show OLT slot		Optional	<a href="#">1.2.3</a>
Show ONT under OLT		Optional	<a href="#">1.2.4</a>

#### 1.1.1.2. Configure slot linecard type

Table 1-2 Configure slot linecard type

Operation	Command	Remarks
Enters the global configuration mode.	<b>configure terminal</b>	-
Configure slot linecard type	<b>set slot slot-id type { ge-24 / gpon-16 / 10ge }</b>	Optional: gpon-16 by default

### **1.1.1.3. Show slot linecard type**

Table 1-3 Show slot linecard type

Operation	Command	Remarks
Show slot linecard type	<b>show slot type</b>	Optional: In global configuration mode



Note: only when specified slot type is the same as the real linecard type, the slot can work.

### **1.1.1.4. Show ONT under OLT**

Table 1-4 Show ONT under OLT

Operation	Command	Remarks
Enters the global configuration mode.	<b>configure terminal</b>	-
Show ONT under OLT	<b>show ont brief</b>	Optional
Enter PON port mode	<b>Interface pon interface-num</b>	-
Show ONT under PON port	<b>show ont brief</b>	Optional

### **1.1.1.5. Configuration Examples**

Insert a GPON linecard in Slot 5

1. Step

Configure linecard type in slot 5.

```
GPON(config)#set slot 5 type gpon-16
```

2. Show slot type

```
GPON(config)#show slot type
```

slot	config type	current type	status
SC-0	SC	SC	ONLINE
SC-1	NULL	NULL	DOWN
LINE-2	GPON-16(8 GPON, 8 GE)	NULL	DOWN
LINE-3	GPON-16(8 GPON, 8 GE)	NULL	DOWN
LINE-4	GPON-16(8 GPON, 8 GE)	NULL	DOWN
LINE-5	GPON-16(8 GPON, 8 GE)	NULL	